



Contents

| | | | |
|---|---------|--|---------|
| Introduction | i | Installation - Primelok Weatherboards | 19 |
| Weathertex Product Range | 1 - 3 | Installation - Selflok Weatherboards | 20 |
| Weathertex Accessories Range | 4 - 7 | Installation - Wall Shingles | 20 |
| Fasteners and Gun Nailing | 8 | Installation - Weathergroove | 21 |
| Product Information | 9 - 11 | Installation - ExteriorBoard and High ImpactBoard | 22 |
| General Requirements - All Products | 11 - 14 | Installation - Rubix Panel | 23 - 27 |
| Installation - Cavity Wall Systems | 15 - 16 | Warranty | 29 |
| Installation - Weathertex Weatherboards | 17 - 19 | | |

Introduction

Weathertex® is Natural Australian hardwood timber Weatherboards and Architectural Panels. Whether you are seeking external timber cladding for a renovation, extension, new home, or any commercial application, Weathertex weatherboards and Architectural Panels offer an endless variety of external timber cladding solutions.

Weathertex puts sustainability and durability at the forefront of all our products. This ensures Weathertex delivers natural, long-lasting, eco-friendly timber products to customers in Australia and around the world. Sustainably manufacturing a highly durable product is an important part of Weathertex's environmental impact. Made from environmentally sustainable Australian hardwood, Weathertex is an all natural product with 97% hardwood and 3% natural wax with no chemical additives.

Weathertex produces 100% of its product from sustainable new growth Australian hardwood in an ISO 9001 certified process. All hardwood sourced for the production of Weathertex products comes from local new growth forests within 150 kilometres of the site. Weathertex has worked to ensure the raw timber for the production of its reconstituted natural hardwood is sourced from local sawmill tailings, thinnings and sustainably managed forests. No old growth hardwood is ever used, so the sourcing of our timber has minimal environmental impact and avoids depletion of our natural resources.



* Refer to Weathertex Manufacturer's Warranty Conditions



Weathertex Product Range


All Weathertex products have a thickness of 9.5mm and are primed as a standard feature. Some products as identified below, are also available unprimed.

Weathertex Weatherboards

Smooth and textured surface planks for lapped applications.


Classic

3660mm x 200mm 3660mm x 300mm

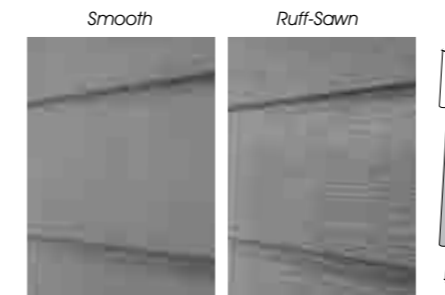

Rusticated

3660mm x 200mm

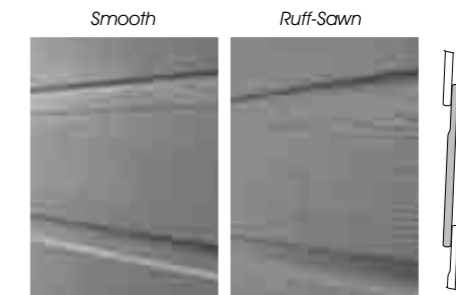


Selflok Weatherboards

Selflok Weatherboards are routed during manufacturing with a self-locking feature to allow each board to accurately align above one another, providing a clean and neat finish. Semi-concealed fixing in many wind areas is also possible. Ecogroove Woodsman available unprimed.

Millwood

3660mm x 300mm

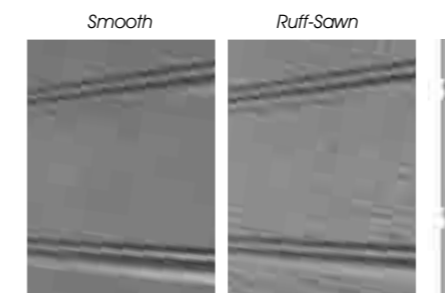


Old Colonial

3660mm x 300mm




Texwood

3660mm x 300mm

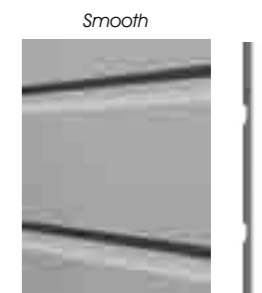

Ecogroove 150*


3660mm x 300mm

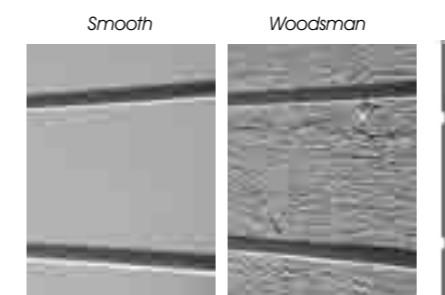

* Refers to groove spacing.

Ecogroove 300*

3660mm x 300mm

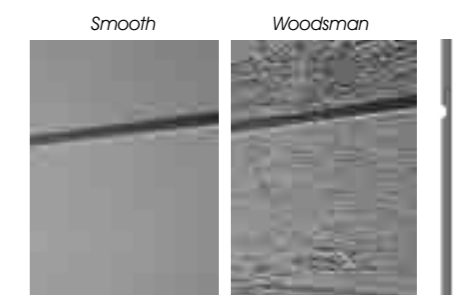

* Refers to groove spacing.

Wall Shingles

Regular vertically grooved Ruff-Sawn Weatherboards for overlapping shingles effect. Notched lower edge. Please note that wall shingles are supplied unprimed.




Primelok Weatherboards

Smooth or textured profiled planks which feature the Primelok® aligning spline for increased accuracy, up to 20% faster installation than similar width lapped planks, and concealed fixing.


Primelok 200

3660mm x 200mm

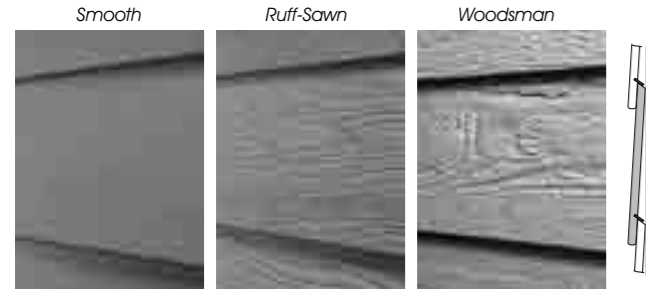


Braidwood

3660mm x 200mm

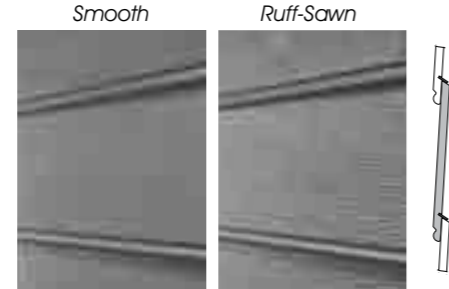


Federation

3660mm x 170mm

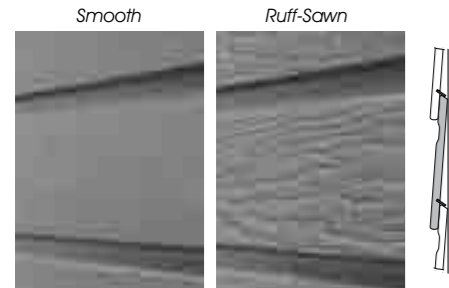

Shadowood


3660mm x 170mm

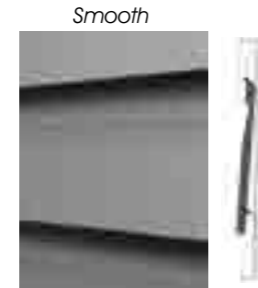

Weathertex Architectural Panels


Weathergroove

Smooth, Ruff-Sawn or Woodsman surface texture with regular grooves. Rebated long edges combine with Weathergroove joiners to give a seamless vertical grooved wall. Woodsman available unprimed.



ExteriorBoard and High ImpactBoard

ExteriorBoard and High ImpactBoard* offer the sought after modern express joint style by incorporating both vertical and horizontal express joints. Smooth and Woodsman surfaces are available, Woodsman is available unprimed.

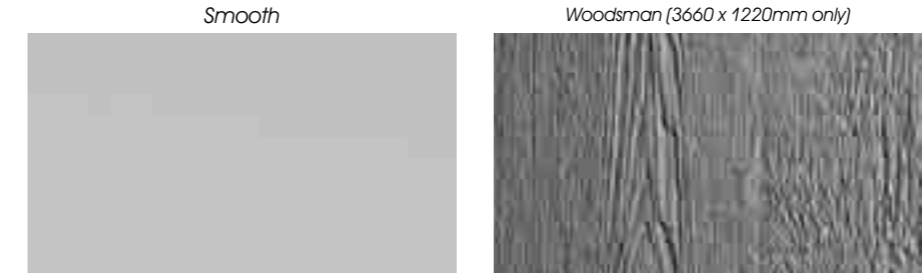

ExteriorBoard Sizes:
 3660mm x 1220mm
 2745mm x 1220mm
 2440mm x 1220mm
 1220mm x 1220mm
 915mm x 1220mm

GUARANTEED 10 YEAR
 NOT TO ROT OR SPLIT, CRACK

PEFC
 PEF021-31-09

*Refer to Weathertex Manufacturer's Warranty

* High ImpactBoard is only available in smooth and sizes 3660mm x 1220mm and 2745mm x 1220mm.

Rubix Panel

Rubix Panel is a self-locking Architectural Panel designed to be joined on or off-stud.




Sizes:
 1200mm x 1200mm
 1200mm x 900mm



*Refer to Weathertex Manufacturer's Warranty

Natural Woodsman

Weathertex Natural Woodsman range offers the characteristics and look of raw, undressed timber. ^ Refers to groove spacing.

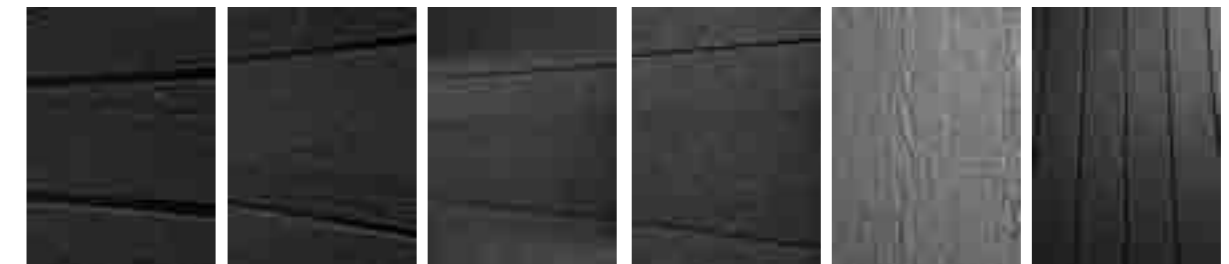

Ecogroove 150 ^ Natural
 Ecogroove 300 ^ Natural
 Vgroove 150 ^ Natural (MTO)
 Vgroove 300 ^ Natural (MTO)
 ExteriorBoard Natural (3660x1220mm only)
 Weathergroove Natural (3660x1196mm only)



* Refer to Weathertex Manufacturer's Warranty



Weathertex's Natural Woodsman (unprimed) surface provides unique appearance options, not achievable with the use of paints or pigmented finishes. When installed natural, the Natural Woodsman surface has the characteristics and look of raw, undressed timber. The natural surface can be oiled to maintain the look of fresh, brown timber or, alternatively it can be left untreated and allowed to age naturally. If allowed to age, the surface will weather and grey similar to other natural timber.







When purchasing and installing Weathertex Natural Woodsman, there are a number of things to keep in mind. Painting natural board with a pigmented finish will void all warranty. If a pigmented painted finish is to be applied, it must be onto Weathertex's primed board. If the raw surface is to be oiled, a good quality, exterior grade timber oil such as a decking oil must be used. Weathertex recommends the appearance of a satin style oil. To maintain the fresh brown appearance and prevent aging and greying, the oil must be applied and maintained in accordance with the oil manufacturer's instructions.

Weathertex's natural finished products are covered by a 7 year warranty not to rot, split or crack. Please refer to the Weathertex Manufacturer's Warranty for full details. If the board is to be installed untreated and allowed to weather naturally it may develop some small black spots on the surface. This is carbon which is inherent with the manufacturing process. These small black spots are not mould and will not affect the performance or longevity of the product.

Weathertex Accessories Range
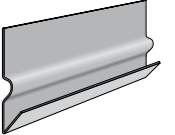
| PRODUCT | LENGTH (mm) | SUITED TO: | |
|------------------------|---------------------------------------|--|---|
| WEATHERBOARD JOINERS | 200 Smooth or Ruff-Sawn 300 Smooth | Classic 200mm Weatherboards Primelok Classic 200mm Classic 300mm Weatherboards |  |
| RUSTICATED JOINERS | 200 Smooth 200 Ruff-Sawn | Rusticated Smooth Rusticated Ruff-Sawn |  |
| BRAIDWOOD JOINERS | 200 Smooth 200 Ruff-Sawn | Primelok Braidwood Smooth Primelok Braidwood Ruff-Sawn |  |
| FEDERATION JOINERS | 170 Smooth 170 Ruff-Sawn | Primelok Federation Smooth Primelok Federation Ruff-Sawn |  |
| SHADOWOOD JOINER | 170 Smooth | Primelok Shadowood Smooth |  |
| MILLWOOD JOINERS | 300 Smooth 300 Ruff-Sawn | Selflok Millwood Smooth Selflok Millwood Ruff-Sawn |  |
| OLD COLONIAL JOINER | 300 Smooth | Selflok Old Colonial Smooth |  |
| ECOGROOVE 150 JOINERS | 300 Smooth 300 Woodsman | Selflok Ecogroove 150 Smooth Selflok Ecogroove 150 Woodsman |  |
| ECOGROOVE 300 JOINERS | 300 Smooth 300 Woodsman | Selflok Ecogroove 300 Smooth Selflok Ecogroove 300 Woodsman |  |
| TEXWOOD JOINER | 300 Smooth | Selflok Texwood Smooth |  |
| SHINGLE JOINER | 255 | Weathertex Wall Shingles |  |
| 170MM CONCEALED JOINER | 170 | Primelok 170 Weatherboards |  |
| 200MM CONCEALED JOINER | 200 | Classic 200mm Weatherboards Primelok 200mm Weatherboards |  |
| 300MM CONCEALED JOINER | 300 | Selflok 300mm Weatherboards |  |

Weathertex Accessories Range






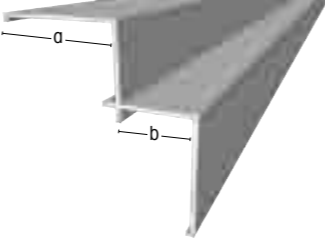
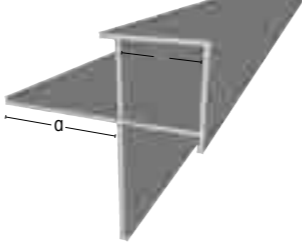
| PRODUCT | LENGTH (mm) | SUITED TO: | |
|----------------------------------|------------------|---|--|
| PRIMELOK STARTER STRIP | 1830 | All Weathertex Primelok Weatherboards |  |
| WEATHERGROOVE JOINERS | 2440, 2745, 3660 | Weathergroove |  |
| WEATHERGROOVE HORIZONTAL JOINERS | 3660 | Weathergroove Smooth Weathergroove Ruff-Sawn |  |
| PVC DEEP CHANNEL JOINER | 3660 | ExteriorBoard, High ImpactBoard |  |
| SMALL CORNER PLUG | | Traditional Small External Aluminium Corner |  |
| LARGE CORNER PLUG | | Traditional Large External Aluminium Corner |  |

CAVITY WALL SYSTEM




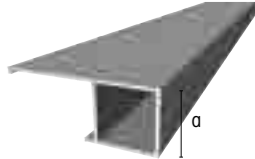
| | | | | |
|-----------------------|------|---------------|--|---|
| SMALL CAVITY CLOSER | 1830 | a = 10 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE CAVITY CLOSER | 1830 | a = 20 | Classic 200 and 300mm Weatherboards, Primelok Weatherboards | |
| WEATHERTEX WRAPSHIELD | | 60m x 1350mm | All Weathertex Weatherboards and Architectural Panels when installed using the cavity fix method |  |
| CAVITY BATTENS | | 1220mm x 45mm | All cavity constructions |  |

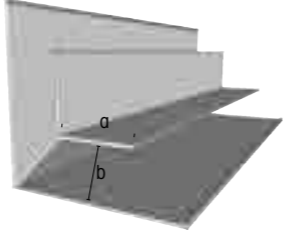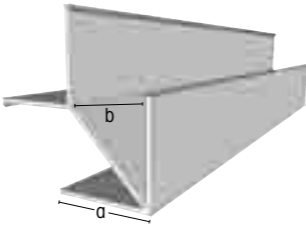Trimtec Accessories

- All Trimtec Accessories are made from anodised aluminium.

| PRODUCT | LENGTH (mm) | DIMENSION | SUITED TO: | |
|--------------------------------------|-------------|------------------|---|---|
| LF ALUMINIUM CORNERS | | | | |
| SMALL INTERNAL LF ALUMINIUM CORNER | 3660 | a = 27 b = 11 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE INTERNAL LF ALUMINIUM CORNER | 3000 | a = 27 b = 21 | Primelok Weatherboards, Rusticated, Classic Weatherboards | |
| SMALL EXTERNAL LF ALUMINIUM CORNER | 3660 | a = 27 b = 11 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE EXTERNAL LF ALUMINIUM CORNER | 3000 | a = 27 b = 21 | Primelok Weatherboards, Rusticated, Classic Weatherboards | |
| SMALL WINDOW SURROUND | 3660 | a = 11 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE WINDOW SURROUND | 3660 | a = 21 | Primelok Weatherboards, Rusticated, Classic Weatherboards |  |
| WINDOW CORNER | | | Suited to finish corner junctions between window surrounds |  |
| TRADITIONAL ALUMINIUM CORNERS | | | | |
| SMALL INTERNAL ALUMINIUM CORNER | 3660 | a = 35 b = 11 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE INTERNAL ALUMINIUM CORNER | 3000 | a = 35 b = 21 | Primelok Weatherboards, Rusticated, Classic Weatherboards | |
| SMALL EXTERNAL ALUMINIUM CORNER | 3660 | a = 35 b = 11 | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| LARGE EXTERNAL ALUMINIUM CORNER | 3000 | a = 35 b = 21 | Primelok Weatherboards, Rusticated, Classic Weatherboards | |

Trimtec Accessories

| PRODUCT | LENGTH (mm) | DIMENSION | SUITED TO: | |
|--------------------------------|--------------------------|------------------------------|---|---|
| ALUMINIUM Z FLASHING | 3660 | | Weathergroove, ExteriorBoard, High ImpactBoard Other products as required |  |
| LONG VERTICAL ALUMINIUM JOINER | 3000 3660 | | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard |  |
| ALUMINIUM DEEP CHANNEL JOINER | 3660 | | ExteriorBoard, High ImpactBoard |  |
| ALUMINIUM END STOP | 3660 Small 3000 Large | a = 11 Small a = 21 Large | Selflok Weatherboards, Weathergroove, ExteriorBoard, High ImpactBoard, Primelok Weatherboards, Rusticated Classic Weatherboards |  |

Weathertex Anodised Aluminium

Storage and Handling

Anodised aluminium products should be stored in a dry and flat position away from any potentially corrosive materials. Timber or soft bearers at a distance no more than one metre apart should be used to support the product. Prolonged exposure to moisture will promote corrosion. This should be avoided and if experienced, immediately correct. The products are subject to damage or could damage other materials they are brought in contact with.

The edges and cut corners of the product may cause personal injury if brought into contact with the body. Wear glasses, gloves and protect skin where possible. When cutting use appropriate personal protective equipment such as eye protection and avoid air borne metal fragments.

Fasteners

For ease of installation, the following accessories are available through Weathertex stockists.

| PRODUCT | LENGTH (mm) | SUITED TO: |
|------------------|---|---|
| NAILS | | |
| WEATHERTEX NAILS | 50 x 2.8mm countersunk head galvanised nail | Classic, Rusticated, Selflok, Shingles, Architectural Panels |
| FLAT HEAD NAILS | 50 x 2.8mm flat head galvanised nail | All Primelok Weatherboards fixed onto softwood frames |
| | 60 x 2.8mm flat head galvanised nail | For Weatherboards fixed onto softwood frames on cavity system |

| PRODUCT | SUITED TO: |
|---|--|
| SCREWS | |
| ITW Buildex Countersunk Rib Head Wingtek Screw (class 3) No.8 - 18x35mm | Fixing Weathertex Weatherboards and Architectural Panels to 1.0 - 2.5mm steel frames |
| ITW Buildex FibreZips M5 - 18 x 30mm Countersunk Head | For fixing Primelok, Selflok to steel frames 0.55 - 1.0mm thick |

Notes:

- All fasteners (nails and screws) must be galvanised or suitably coated to resist corrosion for external application. (Australian Standard AS 3566, Class 3 for screws).
- Coastal locations can be very corrosive to fasteners, especially within distances of up to 500m from the sea. When installed in high corrosion zones, fasteners (nails and screws) must be made of materials appropriate to the desired life of the system and geographical location. Stainless Steel Nails and Class 4 Screws may be necessary in these zones. The advice of the fastener supplier should be sought.
- The fasteners specified are minimum lengths required for each specific profile. If there is additional material between the Weathertex and the stud eg. packing, then the fastener length must be increased to provide the same fastener depth in the stud. See Cavity Fixing System Installation Instructions.
- Nails MUST NOT be overdriven. This can reduce the holding capacity of the Weathertex.

Gun Nailing

Gun nailing can be used as an alternative to specified hand driven nails. Generally, gun nails should have equivalent dimensions, head size, etc. to hand driven nails and must be galvanised or suitably coated for external use.

Suitable nail guns for the installation of Weathertex with the nails below includes, but may not be limited to:

- DUO-FAST – KD665A Coil Nailer
- MAX – CN565S
- STANLEY BOSTITCH – N75C-1 (With dial a depth)
- SENCO - SCN56
- PASLODE – Impulse Framemaster B20540

| SUPPLIER | NAILS | DESCRIPTION |
|---|--------------|---|
| FOR SOFTWOOD FRAMES | | |
| DUO-FAST | D41260 | 45mm ring shank galvanised nail |
| | D41510 | 50mm ring shank galvanised nail |
| STANLEY BOSTITCH | AC45R250-GAL | 45mm ring shank galvanised nail |
| | AC50R250-GAL | 50mm ring shank galvanised nail |
| PASLODE | B20561V | 50mm ring shank D-HEAD galvanised nail |
| | D41580 | 50mm ring shank stainless steel nail |
| FOR HARDWOOD FRAMES | | |
| DUO-FAST | D41260 | 45mm galvanised flat head nail (ring) |
| | D41510 | 50mm galvanised flat head nail (ring) |
| STANLEY BOSTITCH | AC45P250-GAL | 45mm galvanised flat head nail |
| | AC50P250-GAL | 50mm galvanised flat head nail |
| PASLODE | B20565V | Impulse 50 x 2.87mm mechanical gal value pack |
| | D41600 | 50mm screw shank stainless steel nail |
| FOR STEEL FRAMES (1.0 - 2.0MM FOR USE IN GEOGRAPHIC REGIONS UP TO C2 ONLY) | | |
| DUO-FAST | D41060 | 32mm screw hardened dacrotised coil nail (Primelok, Selflok Profiles) |
| | D42360 | 40mm screw hardened dacrotised coil nail (Classic lapped profiles) |

Notes:

- Installers using gun nailing must assure themselves that the appearance of the finished nailed Weathertex is suitable for the intended use. Generally, head sizes in excess of 6mm or T and D headshape nails may not produce a satisfactory finish on Selflok profiles or any other face fixed profiles eg. Weathergroove.
- Nails MUST NOT be overdriven. This can reduce the holding capacity of the Weathertex. If the nailing depth cannot be adequately controlled when gun nailing, then it is preferable to under-drive and tap home with a hammer.

Product Information

Dimensions and Packaging

| WEATHERBOARDS | LENGTH (mm) | WIDTH (mm) | UNITS PER PACK | CONTENTS m ² |
|------------------------|-------------|------------|----------------|-------------------------|
| Classic 200 | 3660 | 197 | 144 | 103.8 |
| Classic 300 | 3660 | 298 | 96 | 104.7 |
| Rusticated | 3660 | 197 | 144 | 103.8 |
| Wall Shingles | 1195 | 225 | 120 | 32.3 |
| SELFLOK WEATHERBOARDS | LENGTH (mm) | WIDTH (mm) | UNITS PER PACK | CONTENTS m ² |
| Millwood | 3660 | 298 | 96 | 104.7 |
| Old Colonial | 3660 | 298 | 96 | 104.7 |
| Ecogroove 150 | 3660 | 298 | 96 | 104.7 |
| Ecogroove 300 | 3660 | 298 | 96 | 104.7 |
| Texwood | 3660 | 298 | 96 | 104.7 |
| Vgroove 150 | 3660 | 298 | 96 | 104.7 |
| Vgroove 300 | 3660 | 298 | 96 | 104.7 |
| PRIMELOK WEATHERBOARDS | LENGTH (mm) | WIDTH (mm) | UNITS PER PACK | CONTENTS m ² |
| Primelok 200 | 3660 | 197 | 144 | 103.8 |
| Braidwood | 3660 | 197 | 144 | 103.8 |
| Federation | 3660 | 170 | 168 | 104.5 |
| Shadowood | 3660 | 170 | 168 | 104.5 |
| ARCHITECTURAL PANELS | LENGTH (mm) | WIDTH (mm) | UNITS PER PACK | CONTENTS m ² |
| ExteriorBoard | 12 x 4 | 3660 | 24 | 107.2 |
| | 9 x 4 | 2745 | 24 | 80.37 |
| | 8 x 4 | 2440 | 24 | 71.4 |
| | 4 x 4 | 1220 | 48 | 71.4 |
| | 4 x 3 | 1220 | 48 | 53.6 |
| Rubix Panel | 4 x 4 | 1200 | 48 | 69.1 |
| | 4 x 3 | 1200 | 48 | 51.8 |
| Weathergroove | 12 x 4 | 3660 | 24 | 105.1 |
| | 9 x 4 | 2745 | 24 | 78.8 |
| | 8 x 4 | 2440 | 24 | 70.0 |
| High ImpactBoard | 12 x 4 | 3660 | 24 | 107.2 |
| | 9 x 4 | 2745 | 24 | 80.37 |

Physical Properties

| PROPERTY | UNIT | TYPICAL VALUES |
|--|-------------------|----------------|
| Density | kg/m ³ | 990 |
| Mass/Unit Area | kg/m ² | 9.4 |
| Modulus of Rupture | MPa | 30 |
| Modulus of Elasticity | MPa | 4500 |
| Moisture content ex mill | % | 7.5 |
| Hydro Expansivity = change in face dimensions over the range of 50% to 90% relative humidity | % | 0.25 |

* Note: ImpactBoard has a guaranteed minimum density rating of 1025 kg/m³.

Thermal Insulation

The thermal conductivity of Weathertex Weatherboard is 0.195W/mK. The thermal resistance R-value for the 9.5mm thickness is 0.05m²K/W.

ENERGY EFFICIENT HOUSING: is an initiative of the Australian Greenhouse Office and has been adopted by most States. House designs are assessed on a "star" rating principle (1 to 5 stars with 5 being the best). A Weathertex clad timber frame, internally lined and with various levels of insulation within the cavity will contribute to the achievement of energy efficiency.

| INSULATION WITHIN WALL FRAMING CAVITY | R-Value of Total Wall m ² K/W |
|--|--|
| Nil | 0.4 |
| Double sided perforated reflective foil laminate (rfl) dished between studs | 1.3 |
| R1.5 bulk insulation between studs with breather foil or building paper under Weathertex | 1.7 |
| R1.8 bulk insulation between studs with breather foil or building paper under Weathertex | 1.9 |

Sound Transmission

A wall consisting of 100mm x 50mm timber studs at 450mm centres, clad with Weathertex and lined internally with 5.5mm hardboard, was tested at the NATA registered, Building Material Acoustical Laboratory, Concord, NSW – STC 35. The sound transmission class can be increased to around STC 38-40 by using fibreglass or insulating board beneath the internal lining. Further STC data can be obtained in the "Weathertex and Fire" Factsheet.

High Wind Areas

WeatherTex direct fixing system has been subject to simulated wind suction forces at the Cyclone Testing Station, James Cook University, Townsville, Queensland, and in our own laboratory. When fixed as specified to timber studs the WeatherTex profiles are suitable for use as shown. Wind classifications are as defined in AS4055-2006 "Wind Loads for Housing" and calculations use a local pressure factor for planks within 1200mm of the building corner. **Other country standards are available on request.**

| FRAME | PRODUCT | Fastener | Fixing | Stud Centres(mm) | HIGHEST WIND CLASSIFICATION | | | | |
|--|--|------------------|------------------|------------------|-----------------------------|------------------|---------------|------------------|----|
| | | | | | REGIONS A & B | | REGIONS C & D | | |
| | | | | | Unlined Wall | Internally Lined | Unlined Wall | Internally Lined | |
| WEATHERTEX WEATHERBOARDS | | | | | | | | | |
| Timber | 200mm Classic, Rusticated | WeatherTex Nails | Traditional | 450 | N5 | N5 | C2 | C3 | |
| | | | | 600 | N4 | N4 | C1 | C2 | |
| | Selflok Weatherboards | WeatherTex Nails | Traditional | 450 | N5 | N5 | C2 | C3 | |
| | | | | 600 | N4 | N4 | C1 | C2 | |
| | | | Semi-concealed | 450 | N4 | N5 | N/A | N/A | |
| | | | | 600 | N3 | N4 | N/A | N/A | |
| | Wall Shingles | DUO D31 150 | WeatherTex Nails | Traditional | 450 | N4 | N5 | N/A | C2 |
| | | | | | 450 | N5 | N5 | C2 | C3 |
| Steel | Selflok Weatherboards | DUO D31 150 | Semi-concealed | 450 | N5 | N6 | C1 | C2 | |
| | | | | 600 | N4 | N4 | C1 | C2 | |
| WEATHERTEX PRIMELOK WEATHERBOARDS | | | | | | | | | |
| Timber | Federation and Shadowood | WeatherTex Nails | Traditional | 450 | N5 | N5 | C2 | C3 | |
| | | | | 600 | N4 | N4 | C1 | C2 | |
| | Classic and Braidwood | WeatherTex Nails | Traditional | 450 | N4 | N4 | C1 | C2 | |
| | | | | 600 | N2 | N3 | N/A | C1 | |
| 0.75mm Steel | Federation and Shadowood | FAP32V5 | Traditional | 450 | N4 | N4 | C1 | C2 | |
| | Classic and Braidwood | FAP32V5 | Traditional | 450 | N3 | N4 | C1 | C2 | |
| 1mm Steel | Classic and Braidwood | FAP32V5 | Traditional | 450 | N4 | N4 | C1 | C2 | |
| 1.2mm Steel | Classic and Braidwood | FAP32V5 | Traditional | 450 | N4 | N5 | C2 | C3 | |
| WEATHERTEX ARCHITECTURAL PANELS | | | | | | | | | |
| Timber | Architectural Panels - Joined ON stud | WeatherTex Nails | Traditional | 450 | N5 | N5 | C2 | C3 | |
| | | | | 600 | N3 | N4 | N/A | C2 | |
| | Weathergroove - Joined OFF stud | WeatherTex Nails | Traditional | 450 | N4 | N4 | C1 | C2 | |
| | | | | 600 | N2 | N3 | N/A | C1 | |
| 0.75mm Steel | Architectural Panels - Joined ON stud | FAP32V5 | Traditional | 450 | N4 | N5 | N/A | C2 | |
| | Weathergroove - Joined OFF stud | FAP32V5 | Traditional | 450 | N4 | N5 | N/A | C2 | |
| | Architectural Panels - Joined ON stud | DUO D31 150 | Traditional | 450 | N6 | N6 | N/A | N/A | |
| 1mm Steel | Architectural Panels - Joined ON stud | DUO D31 150 | Traditional | 450 | N6 | N6 | N/A | N/A | |
| | | | | 600 | N6 | N6 | N/A | N/A | |

Notes:

1. AS4055 -2006 Wind Classification N3 is equivalent to a maximum ultimate limit state design gust wind speed of 50m/s (NZS 3604:1999 classification very high). N4 and N5 are equivalent to 61m/s and 74m/s respectively.

2. If additional information is required, please call customer service on 1800 040 080.

WeatherTex as Structural Bracing

Several WeatherTex wall-cladding systems have been tested for use as structural bracing when fixed using the direct fix method of installation. The data given below are for use with limit state design criteria specified in Australian Standard AS 1684-1999, Residential timber-framed construction. Tie-down fixing and other construction detail must be as specified in AS 1684 for the appropriate wind classification.

| JOINTING METHOD | NAIL SPACING Top & Bottom Plates (mm) | NAIL SPACING Vertical Sheet Edges (mm) | NAIL SPACING Intermediate studs & nogging (mm) | BRACING CAPACITY (kN/m) | TYPE A BRADING UNITS per 1.2m wall length |
|-----------------|---------------------------------------|--|--|-------------------------|---|
| On-stud | 150 | 150 | 300 | 4.0 | 1.6 |
| Off-stud | 150 | N/A | 300 | 1.8 | 0.7 |

Note: If additional bracing strength is required from an off-stud join please call customer service on 1800 040 080 for information.

WeatherTex Architectural Panels

WeatherTex Architectural Panels products when fixed directly as specified have the bracing capacity as shown. Minimum wall length to achieve the stated capacity is 900mm for on-stud construction and 2400mm for off-stud construction. In off-stud construction the length of the bracing wall used in the calculation must have a stud at each end of the wall to which the panels are nailed.

Cutting

WeatherTex products are easy to cut and shape with a normal hand or power saw. WeatherTex may be stacked two or three high for multiple cutting. Primelok Weatherboards should be cut individually to protect the aligning spline. Where required, edges may be trimmed with a smoothing plane or sandpaper. Holes are easily drilled with high speed drills or clean cutter bits.

Storage

WeatherTex products should be stored flat, under cover and on timber bearers spaced at maximum centres of 600mm.

When storing WeatherTex outside, keep the stack clear of the ground and cover with waterproof materials to prevent water staining.

Health and Safety

The normal health and safety precautions should be taken when working with wood panel products. Machine tools should be fitted with dust extractors and work areas kept clean. If dust levels exceed Worksafe Australia Standards the wearing of a dust mask (AS 1715 and AS 1716) and safety glasses (AS 1337) is recommended. Storage and work areas should be adequately ventilated.

For more information please telephone 1800 040 080 for your copy of the WeatherTex Exterior Cladding Material Safety Data Sheet or visit www.weatherTex.com.au to download a copy.

General Requirements ALL PRODUCTS

The following installation instructions and guides refer to the Australian standards. WeatherTex provides a full suite of CAD drawings (refer to the WeatherTex website) which should be used in conjunction with the instructions in this installation guide.

Note: All drawings in this installation guide are for demonstration purposes only. Cavity fixing diagrams and vapour permeable sarking have been omitted for clarity.

Site and Foundation

Foundation design must comply with AS 2870 "Residential Slabs and Footings - Construction" and the National Construction Code (NCC) formerly the Builder's Code of Australia (BCA). The grade of adjacent finished ground must slope away from the building to avoid the possibility of water accumulating.

Moisture Management

It is the responsibility of the specifier to identify moisture related risks associated with any particular building design.

Wall construction design must effectively manage moisture, considering both the interior and exterior environments of the building, particularly in buildings that have a high risk of wind driven rain or are artificially heated or cooled. Adequate ventilation and design consideration must be provided to ensure that the wall cavity and the back of the WeatherTex board remains dry at all times. In addition, all wall openings, penetrations, junctions, connections, window heads, sills and jambs must incorporate appropriate NCC complying flashing for waterproofing. The other materials, components and installation methods used to manage moisture in the walls, must comply with the requirements of relevant standards and the NCC.

Framing

Timber or steel frames shall comply with the NCC. Where applicable, timber frames shall be in accordance with Australian Standard 1684 - Residential Timber - Framed Construction. Steel frames must be erected in accordance with the manufacturer's requirements. Frames shall be straight and true with studs at a maximum of 600mm centres. Timber shall be seasoned, as unseasoned timber is prone to shrinkage and can cause sheets and frames to move.

Damp-Proof Courses (DPC)

Lower framing timbers must be isolated from ground moisture by suitable damp-proof courses or termite shielding. Similarly, Weatherboards or Architectural Panels must not be placed in direct contact with masonry, brickwork or concrete. Where necessary use strips of polyethylene to isolate the materials.

Allow at least 150mm clearance between the bottom edge of WeatherTex Weatherboards and Architectural Panels and paved surfaces which are exposed to the weather and at least 225mm clearance to unprotected ground.

Flashing and Weatherproofing

Before fixing WeatherTex, all wall openings, vertical and horizontal joints, sills, heads and corners must be weatherproofed with flashing to comply with NCC and the roof and eaves installed to prevent moisture exposure on the back of the WeatherTex. Flash horizontal joints between Architectural Panels with WeatherTex Aluminium Z Flashing. Failure to appropriately flash all penetrations voids the WeatherTex Manufacturer's Warranty.

On walls projecting from the roof line in upper storey construction, keep the bottom edge of WeatherTex Weatherboards 50mm clear of the lower storey roof claddings. Weatherproof with an approved flashing.

For Direct Fix: Vapour permeable sarking must be used directly under WeatherTex Weatherboards.

For Cavity Fix: A suitable breather membrane must be used.

WeatherTex on Steel Frames

Installing WeatherTex onto a steel frame is generally similar to installing WeatherTex on a timber frame. WeatherTex supports both frame types and WeatherTex's range of Weatherboards and Architectural Panels are suited to installation on either timber or steel.

There is however some differences which the installer must be aware of when installing WeatherTex products onto a steel frame. The following outlines the technical information unique to steel frame installation.

Thermal Breaks

National Construction Code (NCC): Volume 2 – Housing Provisions

Since 2007 there has been a Thermal Break provision within the Energy Efficiency requirements of the NCC. The provision is included to prevent thermal bridging across the wall cavity.

Thermal Bridging

Thermal bridging is the transfer of heat across a conductive path. This conductive path is created between the internal and external lining of a wall by a steel frame. Steel is a good conductor of heat and offers minimal resistance to its flow. The movement of heat across a steel frame leads to a reduction in the R-value of the overall wall system and thus means the building heats up excessively in summer and loses heat in winter. This movement of heat significantly reduces the efficiency of the building's heating and cooling systems. To address this issue, the NCC introduced provisions for the inclusion of thermal breaks to be installed to interrupt thermal bridging.

Construction with Thermal Breaks

The NCC requires a thermal break with an R-value of not less than 0.2 to be installed between the WeatherTex external cladding and the metal framing members to separate both elements.

Not only is it a NCC requirement, the inclusion of a thermal break also increases the energy efficiency of the constructed building which contributes toward BASIX points. It also means less energy is required to maintain a comfortable climate within the home which reduces energy bills and the buildings environmental footprint.

WeatherTex recommends the following two options as suitable thermal breaks to comply with the NCC requirement.

Softwood Timber Battens

Softwood timber battens are easily installed to provide a suitable thermal break between WeatherTex and a steel frame. The softwood timber battens shall be 20mm deep and wide enough to cover the face of the frame. For example if 70x35mm steel frame is chosen, the battens shall be 20x35mm at suitable length. Battens must be secured to all studs and noggings.

WeatherTex Breather Membrane must be installed between the steel frame and the battens. Vapour permeable sarking is not suitable in this case. The breather membrane can be secured by the timber battens as they are installed along a wall. Final fixings will hold battens firmly in place but they must be temporarily fixed to the frame by gun nails at 600mm centres before the cladding can be installed. Ensure a 20mm gap between noggling battens and stud battens.

To stop vermin and other material entering the cavity, the base of the cavity must be sealed using the WeatherTex Large Cavity Closer. A cavity closer must be installed at the base of the wall and above window heads and inter-storey flashings. The bottom of the battens is inserted into the cavity closer.

Fix the cavity closer to the base plate at 300mm centres with 30x2.8mm flat head nails. Butt-join cavity closer ends and ensure the closers are fixed in a straight, level line. It is important that the openings in the cavity closer are kept clear and unobstructed to allow free drainage and ventilation of the cavity.

Once the wall has been battened out, WeatherTex's standard fixing instructions shall be followed to install the cladding on to the frame. In the case of installing WeatherTex Primelok Weatherboards, this includes fixing a WeatherTex Primelok Starter strip to the timber battens. The bottom edge of the starter strip must not be above the bottom edge of the cavity closer.

See WeatherTex's current full installation guide for fixing details and further instructions.

Extruded polystyrene strips

Extruded polystyrene strips are an alternative to softwood timber battens for a thermal break solution. The extruded polystyrene strips shall be 12mm deep and wide enough to cover the face of the frame. For example if a 70x35mm steel frame is chosen, the battens shall be 12x35mm at suitable length. Battens must be secured to all studs and noggings.

WeatherTex Breather Membrane must be installed between the steel frame and the battens. Vapour permeable sarking is not suitable in this case. The breather membrane must be held in place temporarily before the battens and the WeatherTex are installed. Gun nails are suitable to fix the breather membrane to the frame.

After fixing the breather membrane to the frame, the expanded polystyrene



strips must be secured to all studs and noggings. **Nails or screws cannot be used to secure expanded polystyrene strips to the frame.** Instead, double-sided adhesive tape or construction adhesive is suitable to hold the strips in place on the frame. Final fixings will hold extruded polystyrene strips firmly in place. Ensure a 20mm gap between the strips on the noggings and the strips on the studs.

To stop vermin and other material entering the cavity, the base of the cavity must be sealed using the WeatherTex Small Cavity Closer. A cavity closer must be installed at the base of the wall and above window heads and inter-storey flashings. The bottom of the extruded polystyrene strips is inserted into the cavity closer. Fix the cavity closer to the base plate at 300mm centres with 30x2.8mm flat head nails. Butt-join cavity closer ends and ensure the closers are fixed in a straight, level line. It is important that the openings in the cavity closer are kept clear and unobstructed to allow free drainage and ventilation of the cavity.

Once the wall has had all thermal breaks installed, WeatherTex's standard fixing instructions shall be followed to install the cladding on to the frame.


Corner Treatments

Aluminium Corners

Aluminium, like all metals, is subject to thermal expansion/contraction. As a guide it is recognised that aluminium moves by as much as 0.1% of its length over a temperature change of 30 degrees celsius. For this reason it is recommended that expansion gaps be used when working over lengths of greater than 6 metres. This also applies for ends which are to be brought to a rigid stop.

Internal and external corners can be fixed with hot dipped galvanised flat head nails and then permanently fixed by the WeatherTex fasteners specified for each profile penetrating the flashing wings.

Internal and External Aluminium Corners

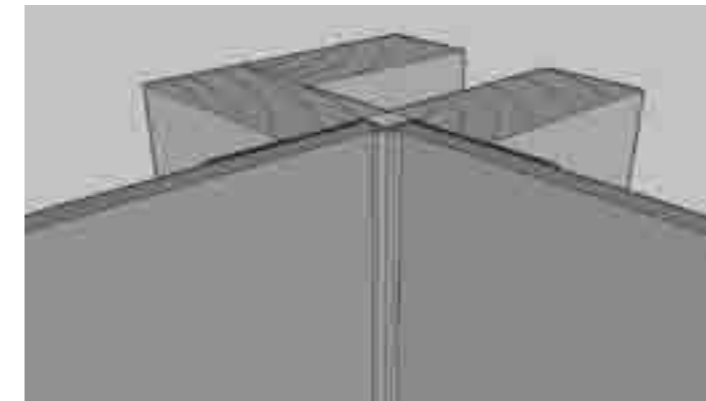

Aluminium Internal Corner




Aluminium External Corner

* Traditional Aluminium Corners shown above

Timber Box Corners

External: Weatherboards and Architectural Panels may be butted up to 50 x 25mm finish size or rebated primed timber stops. Prime any cut ends. Install waterproof flashing around corner studs prior to fixing timber stops. When joining Weatherboards and Architectural Panels up to other materials (for example brickwork) provide 3mm clearance.

Internal: Butt Weatherboards and Architectural Panels up to 25mm x 25mm finish size primed timber stops. Prime any cut ends with solvent-based wood primer. Alternatively, Weatherboard and Architectural Panels ends may be scribed and cut to fit the planks on the adjoining wall.

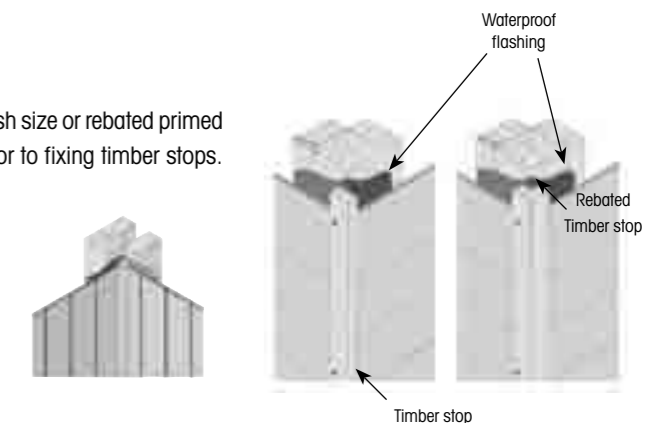

Aluminum End Stops and Window Surrounds

WeatherTex End Stops and Window Surrounds are a versatile flashing designed to give a stylish, modern, aesthetically pleasing result to your next project. The lightweight, anodised aluminium WeatherTex End Stops and Window Surrounds can be used vertically at any junction, giving you the contemporary finish of straight lines and comfort in its ability to dispel even the heaviest of rain. Designed to suit both WeatherTex Weatherboard and Architectural Panel products, the WeatherTex End Stop and Window Surround are your vertical flashing solution in defeating water ingress.

Painting and Maintenance

ALWAYS PAINT PRIMED WEATHERTEX WEATHERBOARDS, ARCHITECTURAL PANELS AND WEATHERTEX SHINGLES WITHIN 60 DAYS OF FIXING. FAILURE TO OBSERVE THIS REQUIREMENT MAY RESULT IN POOR ADHESION OF THE TOP COAT AND MAY VOID WARRANTY.

Priming

Sawn edges of Weatherboards and Architectural Panels must be primed with solvent-based or acrylic tannin resistant wood primer. A sprayable primer is the most efficient method.

To comply with good building practice, timber mouldings, including corner stops and trims, should be primed with exterior, solvent-based or acrylic tannin resistant wood primer before installation.

Paint Colour

Paint colour can have an effect on the performance of Weathertex products. As Weathertex is a timber product, its dimensions will change with changes in moisture content. **Dark paint colours can allow surfaces in warmer climates to become very hot in direct sunlight** leading to loss of moisture and subsequent shrinkage of the Weatherboard. **Plastic joiners can also distort at high temperature.** Light paint colours will lead to better thermal efficiency of the building and minimise problems due to moisture change.

Preparation

Surfaces should be free from dirt, dust or grease. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**

Painting

The primed surface of Weatherboards and Architectural Panels are suitable for the application of exterior grade 100% acrylic or solvent-based paint systems. Weathertex Wall Shingles, should be painted with an exterior 100% acrylic, tannin blocking paint which is suitable for direct application to timber. The paint manufacturer's recommendations on paint suitability, mixing and application, should also be followed.

For Acrylic and Solvent-based finishes follow manufacturers instructions.

Maintenance

Regularly wash the painted surface with water to remove dirt and grime and to improve the performance of the coating. Generally, exterior surface coatings deteriorate by chalking rather than flaking. When repainting becomes necessary and the surface is unbroken, wash down with water. Remove all loose chalk, dirt and dust by sanding, and dust off. Rectify any defects and fill where necessary. Apply a minimum of two coats of paint in accordance with the paint manufacturer's recommendations.

Weathertex and Termites

Weathertex currently provides a warranty which protects against a variety of conditions including (but not exclusive of) the product supplied being fit for purpose, and will not rot, split or crack. In addition to this, Weathertex is warranted against termite attack, provided the following conditions are adhered to.

A termite mitigation plan complying with all local, state and federal requirements and best-practice guidelines must be in place and maintained from the time that the Weathertex is delivered to site and for the life of the product. Provided that the plan and its maintenance can be demonstrated, then the normal Weathertex warranty at the time of purchase will apply to the Weathertex.

Installation CAVITY WALL SYSTEMS

To provide the best protection for your wall against moisture and mould related problems Weathertex highly recommends the use of a cavity fixing system. A cavity system creates a space within the wall that allows airflow to remove any moisture that accumulates in this space either from wind driven rain or condensation. Fixing your Weathertex cladding using the cavity system provides the best defence for your internal lining, frame, insulation and cladding against the damaging effects of moisture.

If the cavity system is not the chosen method of construction, sufficient ventilation within the wall must be otherwise provided or warranty may be void.

When designing for cold climates or buildings with a high internal vapour pressure, a vapour barrier on the interior side of the frame may be required in addition to the breather membrane on the exterior face of the frame. In such cases, the advice of the vapour barrier manufacturer should be sought.

Breather Membrane

Weathertex provide and recommend Weathertex Wrapshield breather membrane (breather foils are not suitable for use in the Cavity Wall Systems).

A breather membrane is a physical barrier between the studs and the Weathertex cladding. Specifically designed to allow water vapour to pass through, the breather membrane holds the insulation in place and affords effective protection during construction and for the life of the building against wind driven rain, snow or dust.

When installing Weathertex using the cavity installation method, in accordance with AS/NZS 4200.1, the chosen breather membrane must:

- Be a non-reflective type,
- Have medium to high vapour permeability (A vapour resistance of less than 0.5MNs/g),
- Provide a high water barrier,
- Have a flammability index of no more than 1.

Cavity Battens


Weathertex provides and recommends the use of Weathertex cavity battens which are 1200 x 45 x 9.5mm. *Note 1*

When installing Weathertex Weatherboards cavity battens must be installed onto all studs.


When installing Weathertex Sheets or Architectural Panels, cavity battens must be installed onto all studs and noggings. Ensure a 20mm gap between noggings and stud battens to allow for drainage of any moisture.

Cavity battens provide the separation between the breather membrane on the wall frame and the cladding. Cavity battens must be installed onto each stud and must be:

- A minimum of 9.5mm thick *Note 1*;
- At least as wide as the width of the studs; and
- Fixed to the studs using a minimum 30 x 2.8mm countersunk head galvanised nail at 600mm centres prior to fixing cladding (this will assist in maintaining them on the frame and keeping them straight),
- Butt joined leaving a 5-10mm gap.

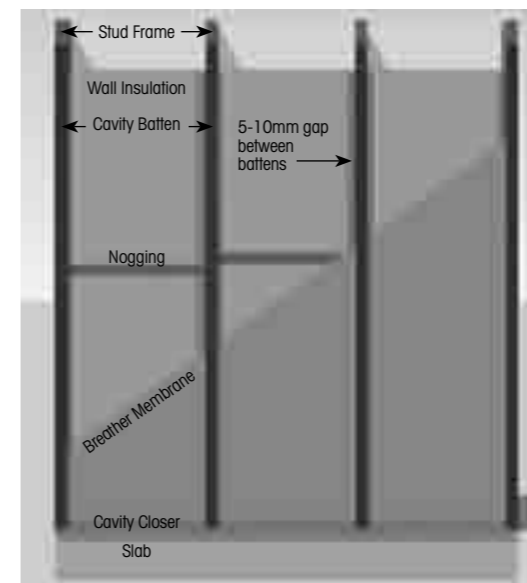

Cavity system diagram for Weatherboards

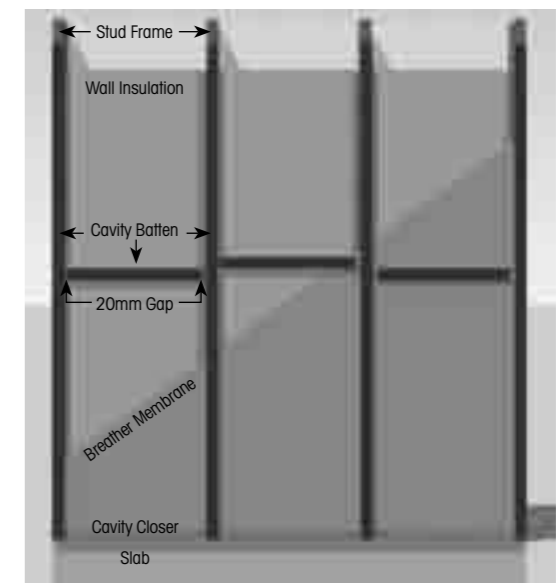

Cavity system diagram for sheets and panels

Notes:

1) Please check local regulations and/or certifiers for recommended batten thickness.

Cavity Closer

To stop vermin and other material entering the cavity, the base of the cavity must be sealed using the Weathertex cavity closer. Designed not to interrupt airflow in the cavity, a cavity closer strip must be installed at the base of the wall and at other points where a cavity is created by the design.


Fix the cavity closer to the base plate at 300mm centres along the closer with 30 x 2.8mm flat head galvanised nails. Butt-join cavity closer ends and ensure the closers are fixed in a straight, level line. It is important that the openings in the cavity closer are kept clear and unobstructed to allow free drainage and ventilation of the cavity.

For Classic 300 and 200mm Weatherboards, and Primelok Weatherboards use 20mm Cavity Closer.

For Selflok Weatherboards, Weathergroove, ExteriorBoard and ImpactBoard use 10mm Cavity Closer.

Infill Insulation

Care should be taken when installing bulk insulation to ensure the stud cavity is not over-filled. Over filling the stud cavity with bulk insulation will impinge in the cavity created by the cavity battens and hence reduce its effectiveness, and may void warranty.

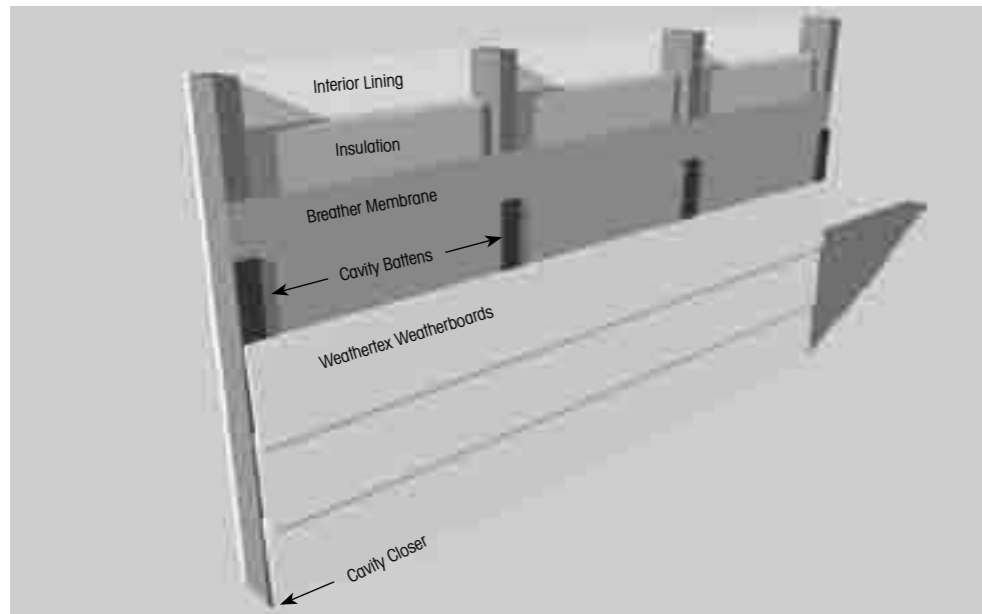

Fixings

When installing Weathertex using the cavity installation system, fixing lengths must be increased to 60mm.

Installation of Weathertex Weatherboards and Architectural Panels using the Cavity Fixing System

Once the cavity system is established on the frame, follow Weathertex's direct fix instructions to fix the cladding to the battens.

Installation WEATHERTEX WEATHERBOARDS

Preparation

Set a horizontal datum or base line around the perimeter of the building. Mark with nails and string line.

Measure the wall height from the datum and determine the number of Weatherboard rows.

Weatherboard Coverage

The table below shows the number of Weatherboard rows to cover walls of a given height. The information is based on the average width of the Weatherboard and the minimum recommended lap.

Weathertex Selflok and all Primelok profiles have set Weatherboard laps. The top row of Weatherboard may require cutting to fit to the eaves.

The lap on Weathertex Classic Weatherboards and Wall Shingles may be increased to give equal width rows over the wall height.

Example:

- 200mm Weathertex Classic Weatherboards are selected to cover an actual wall height of 2570mm.
- 15 rows will cover 2675mm, a height difference of 105mm.
- As 15 rows have 14 Weatherboard laps, divide the height difference by 14; ie. $105\text{mm} / 14 = 7.5\text{mm}$.
- With a minimum lap of 20mm. The actual lap becomes $20\text{mm} + 7.5\text{mm}$ lap difference ie. 27.5mm.
- At the wall/eave intersection fix a timber cover strip, equal in width to the actual lap.

| WALL HEIGHT COVERAGE | | | | | | | |
|----------------------|---------------------------|---------|------------|---------------|----------------------|--------------------|----------------------|
| PROFILE | Weathertex Weatherboard | | | | Selflok | Primelok | |
| | Classic | Classic | Rusticated | Wall Shingles | All Selflok Profiles | Primelok Braidwood | Federation Shadowood |
| Weatherboard Width | 200 | 300 | 200 | 225 | 300 | 200 | 170 |
| Weatherboard Lap | 20 | 20 | 25 | 40 | 19 | 25 | 25 |
| NUMBER OF ROWS | Wall height coverage - mm | | | | | | |
| 1 | 197* | 298* | 197* | 225* | 298* | 197* | 168* |
| 2 | 374 | 576 | 369 | 410 | 577 | 369 | 311 |
| 3 | 551 | 854 | 541 | 595 | 856 | 541 | 454 |
| 4 | 728 | 1132 | 713 | 780 | 1135 | 713 | 597 |
| 5 | 905 | 1410 | 885 | 965 | 1414 | 885 | 740 |
| 6 | 1082 | 1688 | 1057 | 1150 | 1693 | 1057 | 883 |
| 7 | 1259 | 1966 | 1229 | 1335 | 1972 | 1229 | 1026 |
| 8 | 1436 | 2244 | 1401 | 1520 | 2251 | 1401 | 1169 |
| 9 | 1613 | 2522 | 1573 | 1705 | 2530 | 1573 | 1312 |
| 10 | 1790 | 2800 | 1745 | 1890 | 2809 | 1745 | 1455 |
| 11 | 1967 | 3078 | 1917 | 2075 | 3088 | 1917 | 1598 |
| 12 | 2144 | 3356 | 2089 | 2260 | 3367 | 2089 | 1741 |
| 13 | 2321 | 3634 | 2261 | 2445 | 3646 | 2261 | 1884 |
| 14 | 2498 | 3912 | 2433 | 2630 | 3925 | 2433 | 2027 |
| 15 | 2675 | 4190 | 2605 | 2815 | 4204 | 2605 | 2170 |
| 16 | 2852 | 4468 | 2777 | 3000 | 4483 | 2777 | 2313 |
| 17 | 3029 | 4746 | 2949 | 3185 | 4762 | 2949 | 2456 |
| 18 | 3206 | 5024 | 3121 | 3370 | 5041 | 3121 | 2599 |
| 19 | 3383 | 5302 | 3293 | 3555 | 5320 | 3293 | 2742 |
| 20 | 3650 | 5580 | 3465 | 3740 | 5999 | 3465 | 2885 |

*Average width

Joining

As a natural timber product, Weathertex inherently expands and contracts with changes in its moisture content. To accommodate this movement, Weathertex's traditional joiners have been designed to provide the correct spacing between adjoining planks, and cover any changes in dimensions of the product.

Weathertex also provides concealed joiners. Concealed joiners have been designed with a gap that will accommodate any changes in the dimensions of the product. The joiner is flashed on the rear of the Weathertex product to prevent water penetrating into the cavity

This joint may be left "as is" or filled with sealant if desired. When using sealant, movement in the planks may result in visible bulging or concaving of the sealant. In some cases, such as where extreme changes in moisture have occurred, the sealant may pull away from the board leaving a crack between the sealant and the board. This movement will not effect the performance or water tightness of the join, though it may be aesthetically displeasing. If this would cause an issue, Weathertex recommends the use of the traditional joiner.

Avoid penetrating PVC joiners with fixings during the installation process. This may cause the joiner to crack after the installation. Where necessary pre-drill the fixing position through the joiner prior to fixing. Also avoid positioning fixings directly opposite each other across a join as this too may cause joiner damage after installation.


Using traditional joiners

Form joins between Weatherboard ends using joiners selected to suit the particular product. Refer to "Accessories". Stagger joins randomly throughout the wall. Joins should be formed midway between the studs. When fitting Weatherboards, bring the ends into moderate contact with the splayed edges or nibs within the joiner. Do not force ends tightly together.

Simply cut joiners to fit at window heads, sills and eaves.

Notes:

- 1) On first row of Weathertex Rusticated remove leg gauge from back of joiner.
- 2) To fit joiners to cut ends of Primelok Weatherboards it is necessary to trim back the plastic spline.

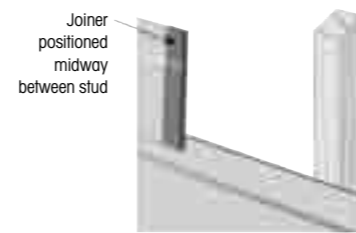

Concealed Joiners

Refer to the above "JOINING" section before choosing to use concealed joiners.

When using the concealed joiner the following instructions MUST be followed:

1. Any cut ends must be primed with a solvent-based exterior wood primer or an acrylic tannin resistant wood primer.
2. Insert the primed butt edge of the Weatherboard into the concealed joiner, resting the bottom edge on the base and locking into position under the top flange. The edge of the Weatherboard should be in moderate contact with the centre nibs within the joiner. Do not force ends tightly together. The top flange will be hidden by the overlap of the board.
3. Insert the primed edge of the next Weatherboard into the other side of the joiner against the centre nibs. A 6mm gap will be left when both ends are in contact with the centre nibs.
4. Fasten the Weatherboard to the wall at each stud in accordance with product requirements. Ensure nails do not pass through joiner.
5. The following applies when choosing to fill the joiner gap with a sealant. Using a caulking gun, run a line of quality, flexible, paintable acrylic sealant up the length of the concealed joiner. Always follow the sealant manufacturer's application instructions. Gaps should be filled with a flexible sealant such as Sikaflex-PRO or Fuller Super Seal HPR25.
6. After the sealant has set, use a sharp blade to remove the excess sealant so the join is clean and flush with the Weatherboards.

Notes:

- 1) When installing Primelok Weatherboards it may be necessary to trim back the plastic spline to fit joiners.

Butt-Joining on stud

Weatherboards can only be butt-joined over studs on lengths of wall up to 5.5m long.

Cut ends must be primed with a solvent-based exterior wood primer or an acrylic tannin resistant primer. Bring ends into moderate contact with one another and fasten both ends to the stud. Movement of Weatherboards due to moisture changes may cause butt joins to open up after installation, particularly on longer wall lengths in full sun that are painted in darker colours.

Installation WEATHERBOARDS

First Row: Trim between the ends of bearers to enable the fixing of a Weathertex strip and the first plank. Fix a 35mm x 9.5mm strip of Weathertex Weatherboard 5mm up from the datum.

Rest the first Weatherboard on the datum line nails. Fasten the bottom edge through the Starter Strip into the timber framing. Fit joiners as work proceeds.


Successive Rows: Use the storey rod, lap gauge or Joiner to position Weatherboards and maintain uniform rows. Check rows for level.

Fastening: Refer to "Accessories" for fastener types and sizes.

At laps, fasten through both Weatherboards into the stud. One fastener per stud, located at least 12mm from edges and ends.

(NOTE THAT PRIMELOK WEATHERBOARDS SHOULD NOT BE FIXED IN THIS MANNER - see Primelok Installation)

Drive fixings flush with the plank surface. No punching is permitted. Screws may be driven up to 2mm below the plank surface. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**

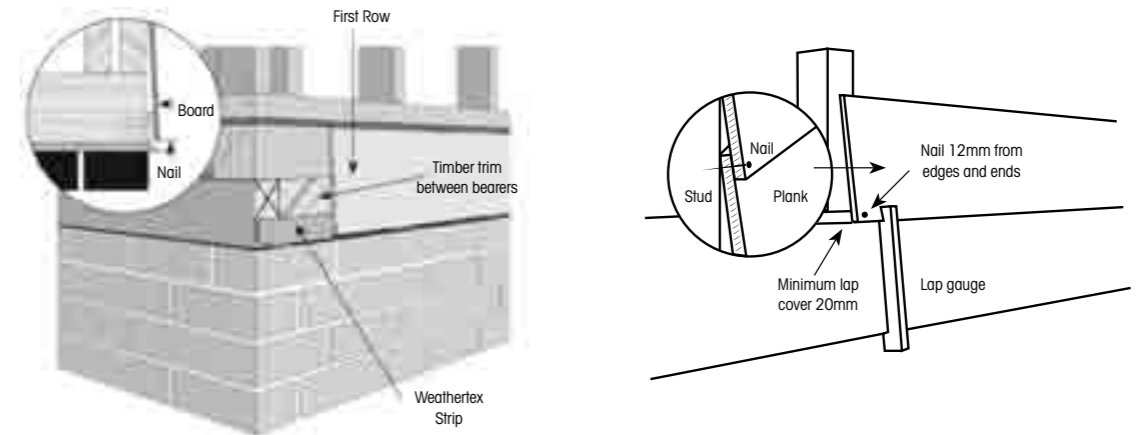

Installation PRIMELOK WEATHERBOARDS

Starter Strips: Fix the Weathertex Primelok Starter Strips to the frame so that the bottom edge of the strip is level with the bottom of the base plate and is straight and level for the full length of the wall. When installing on a cavity system, the large cavity closer is used as a starter strip instead of the Primelok Starter Strip. Use 30mm x 2.5mm galvanised flat head nails for timber frames or No. 8x12mm pan head self-drilling screws for steel frames. Screws should be coated to resist corrosion.

Space fasteners at 300mm centres along the strips. Butt joint starter strip ends together and ensure the strips are fixed in a straight, level line.

First Row: Position the first Weatherboard so that the spline locks over the starter strip. Press the Weatherboard down into the strip and fasten along the top edge of the board to every stud. Keep fasteners 15mm from the top edge. Continue fixing the first row and position joiner over adjoining Weatherboard ends and between the starter strips. To fit join to cut ends, trim back the spline on the back of the Weatherboard using a hacksaw or sharp knife.



Successive Rows: Simply position each Weatherboard so that the spline locks over the splayed top edge on the preceding row. Press the Weatherboard down and fix along the top edge at every stud. Check rows for level.

Nail Weatherboards to timber frames with galvanised flat head nails. Use screws when fixing to light gauge steel frames. Refer to "Accessories".

Fix with one fastener at each stud and at all Weatherboard row ends. Commence fixing at one end of the Weatherboard and work along the edge. Alternatively, start midway along the Weatherboard and work outwards towards the ends.

Keep fasteners 15mm down from the top edge so that they will be hidden by the overlapping Weatherboard. Drive fixings flush with the plank surface. No punching is permitted. Screws may be driven up to 2mm below the plank surface. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**



Installation SELFLOK WEATHERBOARDS

Traditional Fix

First Row: Rest the rebated edge of the first row of Weatherboards on datum line nails.

Fasten Weatherboards directly to the frame with two fasteners at each stud. Keep fasteners 30mm up from the bottom edge. Fit joiners as work proceeds.

Successive Rows: Rest the rebated edge of Selflok Weatherboards on the row below. The Selflok joint provides a 20mm overlap.

Fastening: Fix with two fasteners at each stud. Keep fasteners 12mm minimum from ends, 30mm up from lower Weatherboard edges and approximately 140mm apart.

Drive fixings flush with the plank surface. No punching is permitted. Screws may be driven up to 2mm below the plank surface. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**



Selflok Semi Concealed Fix

In some wind areas (see wind classification table) Selflok Weatherboards can also be fixed with one fixing concealed. In this case, one fixing must be placed 30mm from the bottom edge of plank as per traditional fix. The other fixing must be placed 15mm below the top edge of the plank. This fixing is concealed by the next plank when it is installed. All other factors of installation are according to traditional fix instructions.

Installation WALL SHINGLES


First Row: Trim between the ends of bearers to enable the fixing of a starter strip and the first shingle plank. The Starter Strip shall be a 35mmx9.5mm strip of Weathertex Weatherboard fixed 25mm up from the datum. Align base of the first shingle with datum line. Fix bottom edge through the starter strip into the timber framing.

Successive Rows: Use the storey rod or lap gauge to position shingles with a minimum lap cover of 40mm. Maintain uniform rows and check rows for level.

Fastening: Nail shingles to timber frames with Weathertex nails. Use screws when fixing to metal frames. Refer to "Accessories" for fastener types and sizes.

At laps, fasten through both shingles into the stud. Use one nail per stud, located at least 12mm from edges and ends. Drive fixings flush with the plank surface. No punching is permitted. Screws may be driven up to 2mm below the plank surface. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**

Joining: Form joints progressively with 6mm joiners that fit the rebated shingle ends. Do not force ends tightly together. Where possible, locate joints over studs and fasten ends as shown. If joining between studs, fasten each adjoining shingle to at least two studs. Stagger joints throughout the wall.

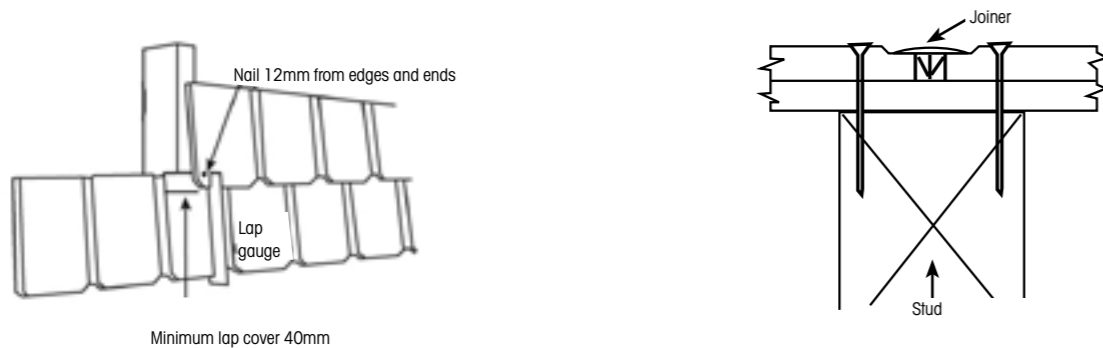

Installation WEATHERGROOVE

Preparation: For general framing and construction details refer to "General Requirements".


Plan sheet layout with long edges vertical*. If the vertical joints are to be formed between studs, then sheet edges must be supported with Weathergroove Joiner over nogging at 750mm maximum centres.

Establish a horizontal datum or base line at least 6mm below the base of the frame and mark with nails and string line.

* Weathergroove cannot be installed horizontally. Weathertex Ecogroove planks may be suitable if horizontal grooves are required.

Fixing detail for Weathergroove:

1. Stud spacing is maximum 600mm centres.
2. Nails are 50mm x 2.8mm galvanised Weatherdex nails (hand driven) or 45mm x 2.5mm ring-shanked, flat-head, galvanised gun nails (Duo-fast C25 -45-RGD or equivalent). Please refer to fixing accessories for more details.
3. Nailing detail for each sheet as shown. Nailing shall be no closer than 12mm from the sheet edges and must not be in the grooves of grooved sheets. Nails must not penetrate the Weathergroove Joiner. Drive fixings flush with the plank surface. No punching is permitted. Screws may be driven up to 2mm below the plank surface. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**
4. Off-stud joints are made using the relevant joiner over noggings at maximum 750mm centres.

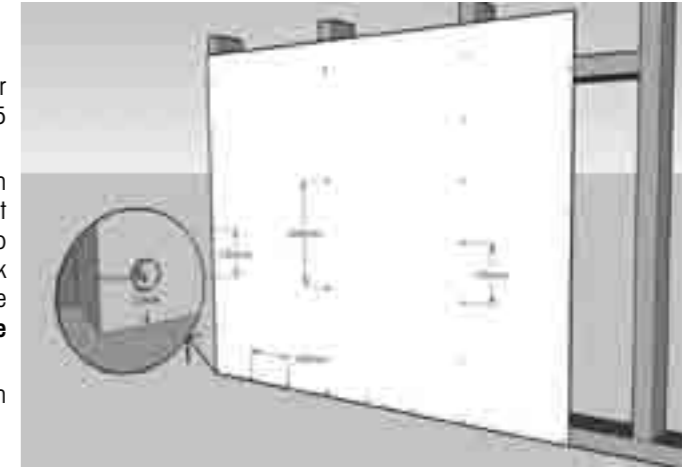

Note: Grooves in Weathergroove are omitted for clarity of drawing.


Joining:

Vertical Joints

Must be formed using Weathergroove Joiner as specified in "Accessories". This joiner will provide the necessary clearance to accommodate movement.

Weathergroove has unique rebated edges for joining with the Weathergroove Joiner, the exposed surface of which are the same width as the grooves in the sheet. Joints may occur over studs or between studs to combine with the sheet grooves and maintain a regular vertical Weatherboard effect.

Avoid penetrating PVC joiners with fixings during the installation process. This may cause the joiner to crack after the installation. Where necessary pre-drill the fixing position through the joiner prior to fixing. Also avoid positioning fixings directly opposite each other across a joint as this too may cause joiner damage after installation.

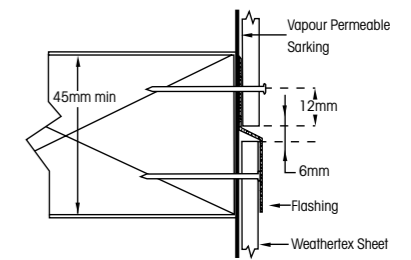

Horizontal Joints using Aluminium flashing

For horizontal joints, use the Aluminium Z Flashing, or horizontal PVC joiner. The horizontal joints must be supported by noggings.



Note: Weathergroove Woodsman shown. Direct fix method shown. In the interest of clarity cavity fixing method and vapour permeable sarking have been omitted.

In areas where the wind rating is classified as N3 or less, the following minimum nailing pattern may be observed. (N3 is equivalent to wind gust speed of 41 m/sec) Stud spacings must be no more than 450mm centres. Fixings must be installed at 300mm centres around the perimeter and across sheets.

All other details are as described in the Weathertex Installation Guide. Wind ratings are as described in Australian Standard AS/NZS 1170.2:2002.

Installation EXTERIORBOARD AND HIGH IMPACTBOARD

ExteriorBoard and High ImpactBoard installation requires the use of the PVC or Aluminium Deep Channel Joiner. The following installation instructions **MUST** be followed:

1. The stud frame must be arranged so that all edges of the ExteriorBoard or High ImpactBoard and the Deep Channel Joiner are supported on double studs and double noggings. The joiner is to be centred on the studs and noggings.
2. **Any cut ends of Weathertex must be primed with a solvent-based exterior wood primer or an acrylic tannin resistant wood primer.**
3. Position the vertical Deep Channel Joiner over the entire height of the wall. Position smaller horizontal Deep Channel Joiners so that the channel meets the vertical joiner channel, but does not run across it. Channels are to run vertically without the possibility of water pooling at a junction point. The joiner should be fixed in place using 25mm flat head nails. The joiner will be held firmly in place by the sheet fixings. **Do not fix the PVC Deep Channel Joiner with a nail gun as this will damage the joiner. Avoid penetrating PVC joiners with fixings during the installation process. This may cause the joiner to crack after the installation. Where necessary pre-drill the fixing position through the joiner prior to fixing. Also avoid positioning fixings directly opposite each other across a join as this too may cause joiner damage after installation.**
4. Prior to the placement of the sheet, run a 5mm bead of quality, flexible, paintable sealant (Silkaflex PRO 2HP or Super Seal HPR25) into the corner of the Deep Channel Joiner.
5. Push the ExteriorBoard or High ImpactBoard into the sealant so that the sealant is evenly distributed around the edges of the sheet, and the sheet fits flush with the Deep Channel Joiner. Ensure that there is enough sealant to completely fill the exposed joiner to board joint. Excess sealant extruding from the joint can be wiped/cut off before the sealant sets.
6. Commence fixing using recommended pattern. Fixings are to be positioned at spacings of 150mm around the perimeter of the sheet with fixings at 300mm centres throughout the sheet on all available studs and noggings. Fixings must be positioned a minimum 12mm from the edge of the sheet.

Fixings can be Weathertex nails or screws. For best results, use a minimum 35mm screw with countersunk head (AS3566, Class 3). Pre drill holes and provide a 2mm countersink. Fill holes with a high quality proprietary grade, acrylic-based flexible paintable filler. **Solvent based or two-part fillers such as epoxy are not suitable and cannot be used.**

Note of caution: Deep Channel Joiner may become permanently deformed if allowed to bend. Store in a flat position to protect the channel ribs.



Step 1

Step 2

Step 3



* Refer to the Weathertex Manufacturer's Warranty.

Installation RUBIX PANEL

Weathertex Rubix Panel is a self locking Architectural Panel which is available in 2 sizes:

- 1200mm x 1200mm (effective wall coverage of approximately 1.4m²)
- 1200 x 900mm (effective wall coverage of approximately 1.1m²)

As a self-locking profile, Rubix Panel does not require any joiners and is simple and quick to install.



Designed to be joined on or off stud, Weathertex Rubix Panel provides unprecedented flexibility and ease of installation. There is no need to pre-plan the stud layout, nor is there a need to cut panels to meet studs for joins.

NOTE: When two rows of Rubix panels meet a corner or junction with another product, a small gap may be created at the edge of the Rubix Panels where the top and bottom rows overlap. This gap should be filled with a high quality, flexible, paintable acrylic sealant such as Sikaflex-PRO as required. Alternatively, this gap can be prevented by trimming 30mm from the edge of the sheets which will meet the corner or junction prior to installation, or installing a small section of the alternate Rubix edge before installing the first panels.

Preparation


For general framing and construction details refer to the "General Requirements" section of this installation guide. For information about fixings, refer to the "Fixings" section of this installation guide.

Plan sheet layout with the rebated faces **either**:

- at the top and the right of each sheet, **or**
- at the top and left of each sheet



This is shown in the diagram below. Once the sheet orientation is chosen for the first panel, **all sheets must be orientated in the same direction.** This is crucial to the performance of the product as it ensures the upper sheets always overlap the face of the sheets below and must be adhered to for warranty to be provided. The back of the Rubix sheet is also printed with the word 'Top' on two sides to indicate which of the panel can be orientated to the top.

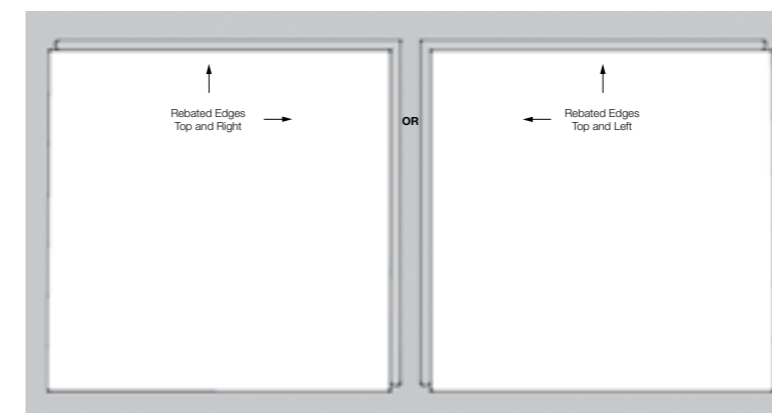


External Installation - Standard Fix


These instructions outline the standard fixing method for Weathertex Rubix Panel. The standard fix method must be used when Weathertex Rubix Panel is to be used externally. Using this fixing method, Weathertex Rubix Panel is suitable for wind zones up to non-cyclonic wind zone N6 and cyclonic wind zone C3.

First Row

1. Studs must be spaced at maximum 600mm centres. Noggings must be provided at maximum 750mm centres.
2. As a minimum, the bottom edge of the sheet must overhang the bottom plate by 20mm. Establish a datum at this level.

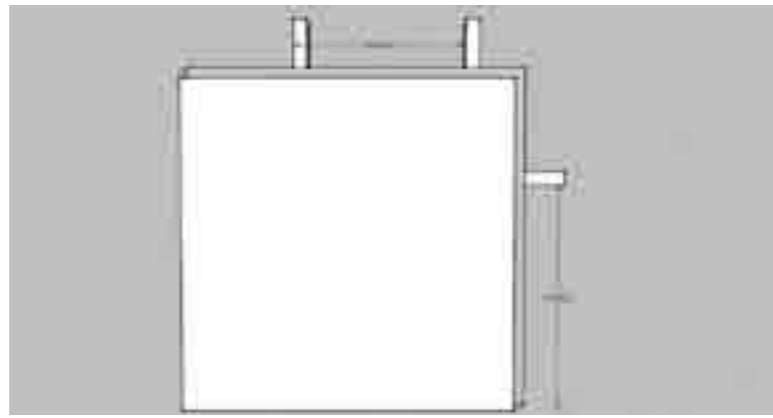


3. Position first board at corner and on the datum and fix. Fixings must be provided at 150mm centres to the studs and plates nearest the edge of the sheet, and 300mm centres throughout the centre of the sheet to all underlying studs and noggings.

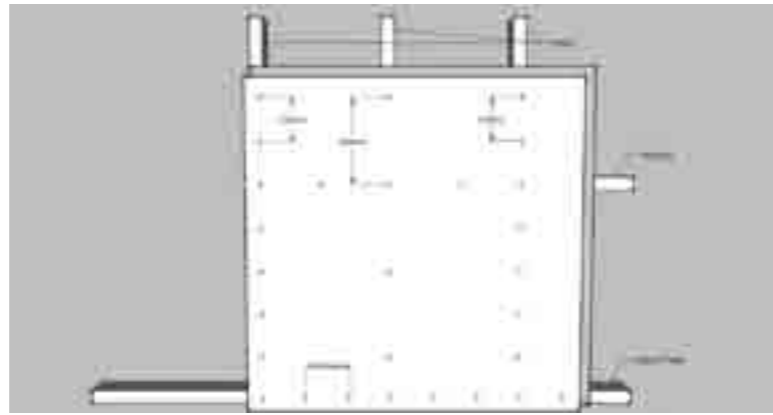

Fixings must not lie within 38mm of the bottom and left edges of the sheet, and 46mm from the top and right sides of the sheet when sheet is orientated as shown here. If sheet is orientated differently, fixing positions must be adjusted accordingly.


4. Run a 5-7mm bead of a good quality, exterior-grade, flexible polyurethane sealant along the back rebated vertical edge of the first sheet for 100mm down the leading edge of the panel from the top, outermost corner.

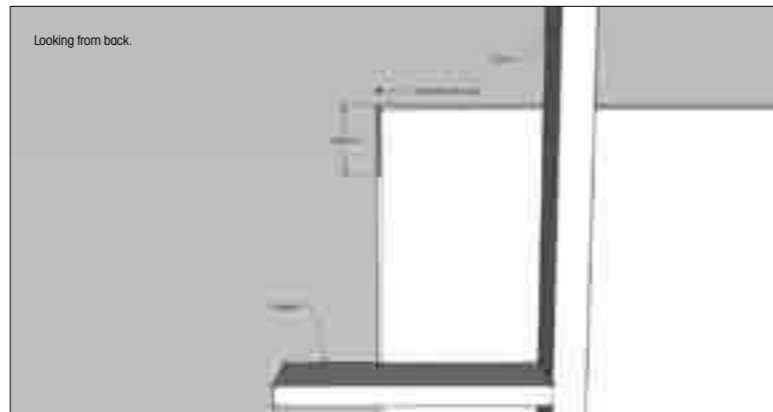

5. Bring second panel into place and ensure the Selflok edges of the two panels fully engage.




Looking down from the top you should see the Selflok fully engaged as is shown in the diagram below.

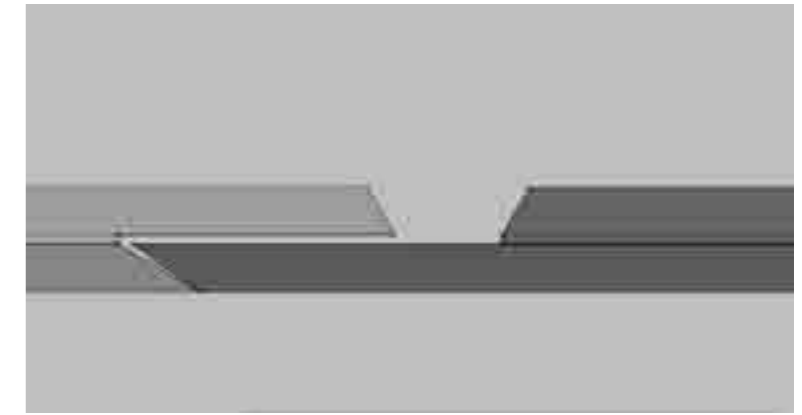

6. Secure second sheet as for first sheet.

7. Repeat to secure all first row sheets along wall. Trim the last sheet to length as required.

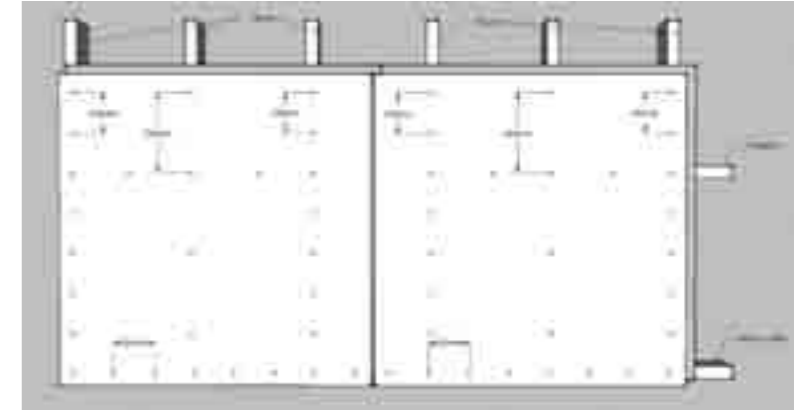


Second Row

8. Starting from the same side of the wall as the bottom row, run a 5-7mm bead of a good quality, exterior-grade, flexible polyurethane sealant along the back rebated edge of the first sheet for 100mm either side of the joint where two sheets below meet. This row of sealant is crucial to the installation and must be maintained throughout the life of the product to prevent water ingress.




View from the side of the wall showing run of sealant along back of Selflok section.

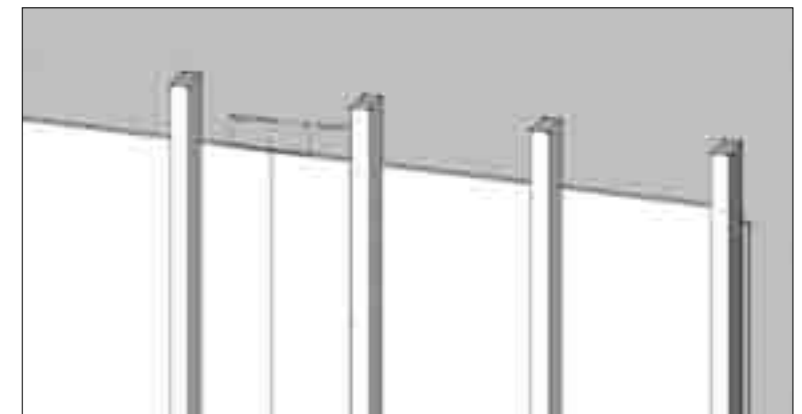

View from the back of the wall showing run of sealant along back of Selflok section.

9. Position first board of the second row at corner and on top of the board below ensuring the Selflok fully engages. The bottom edge of the second row of Rubix Panels will overhang the top edge of the first row of Rubix Panels.

Fix as per fixing instructions for the first row of panels.

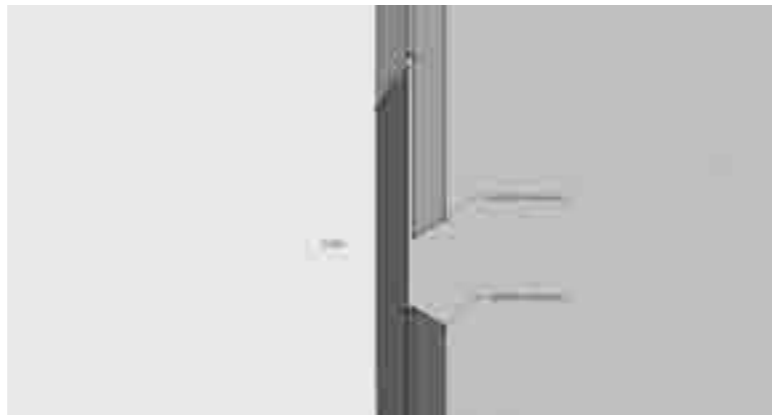


10. Repeat for the second and subsequent panels of the second row following the aligning and fixing instructions given for the first row. Ensure sealant is used according to steps 4 and 8 along the whole length of the first row of panels.


Fit around corners, windows, doors and other protrusions in accordance with the instructions given in the relevant section of this installation guide. All general installation requirements of the full Weathertex installation guide to be adhered to.

Internal Installation - Concealed Fixing (For Internal Use of Rubix Panel only)

When installing Weathertex Rubix Panel internally, there is the option to conceal the fixings. When installing Rubix Panels using the concealed fixing method, the fixings in each panel are installed through the Selflok section of the panel.

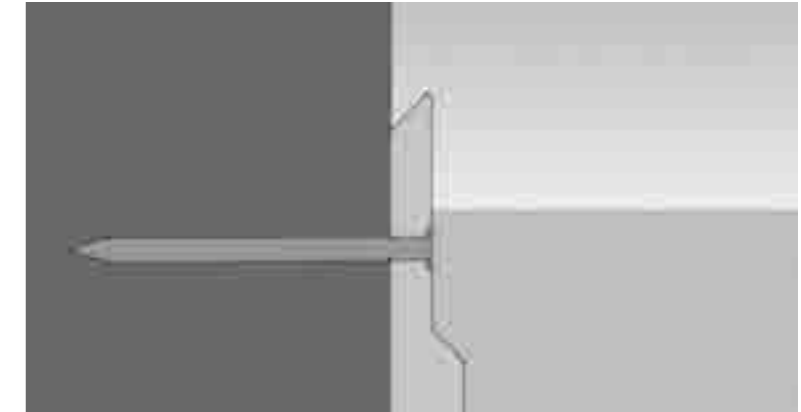


These fixings are concealed by the corresponding Selflok section of the adjoining panels.

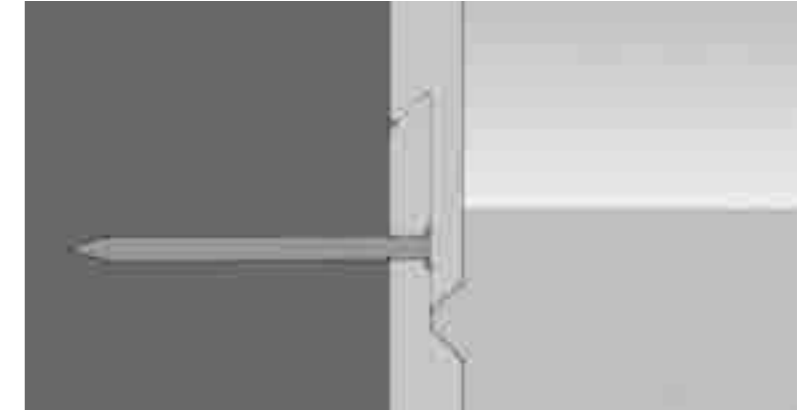


As such, when using the concealed fixing method internally, horizontal and vertical joins must fall on studs and noggings, respectively.

The following fixing pattern shows the location of the fixings when using the concealed fixing method. All other factors of installing Rubix Panel using the concealed fixing method are as per the traditional fix instructions above.

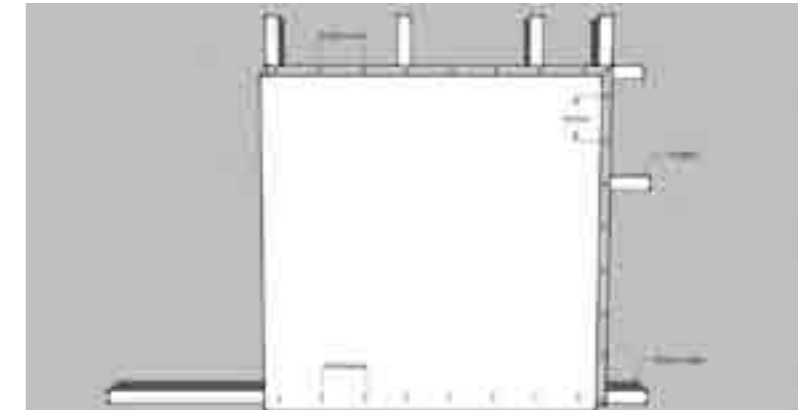

When subsequent sheets are installed, the fixings are concealed.

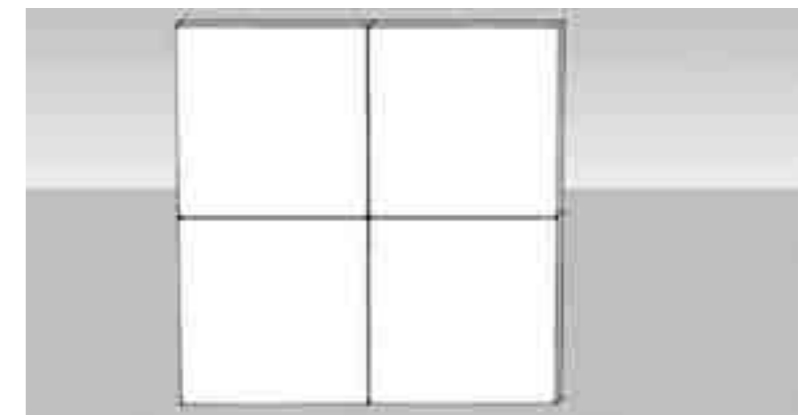

Manufacturer's Warranty

- Weatherex Pty Ltd A.B.N 67 084 713 986 ("Weatherex") warrants that the Products supplied are of first quality, free from material defect in materials, design and workmanship, and in conformity with the technical specifications detailed in the published Weatherex Installation Guide that is current at the date of purchase. This warranty applies for a period of 12 months from date of purchase.
- Natural Woodsman Board Weatherex warrants that its Natural (Brown) Board Products will not rot, split or crack for a period of 7 (seven) years from the date of purchase when prepared, installed and maintained in accordance with Weatherex's current published materials.
Pre Primed ExteriorBoard, High ImpactBoard & Rubix Panel Weatherex warrants that its ExteriorBoard Products will not rot, split or crack for a period of 10 (ten) years from the date of purchase when prepared, installed and maintained in accordance with Weatherex's current published materials. Pre Primed Board Weatherex warrants that its pre primed board Products will not rot, split or crack for a period of 25 (twenty-five) years from the date of purchase when prepared, installed and maintained in accordance with Weatherex's current published materials.
- A reference to Products in these warranty terms and conditions does not include accessory products listed "Accessories" in the Weatherex Price List ("Accessory Products"). Weatherex warrants that the Accessory Products will be free from defect in material and workmanship for a period of 7 years from the date of purchase for the purpose of clarity, the warranties provided in clause 1 and 2 do not apply to Accessory Products.
- The benefits to the purchaser given by the warranties set out in clauses 1 to 3 are in addition to other rights and remedies of the purchaser under Australian Consumer Law in relation to the Weatherex products and accessories.

Conditions of the Warranty

- The warranties provided in clauses 1, 2 and 3 are only available to the original purchaser ("Purchaser") who provides Weatherex with proof of purchase and who makes the claim in writing within 30 days from the point in time when the defect becomes apparent or should have become apparent.
- Weatherex will not be liable for any warranty claims made under clauses 1 and 2 if any of the following apply:
 - the Products are not installed used or maintained in accordance with applicable instructions and/or specifications, including installation and site conditions provided by Weatherex (including the published Weatherex Installation Guide that is current at the date of purchase);
 - the building in which the Products are installed does not comply with all relevant Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements;
 - the Purchaser has not complied with any service instructions which Weatherex may give or any subsequent request as to a modification of the Products which Weatherex may make from time to time in writing;
 - the defect is caused by the use of materials, parts or accessory products that are not supplied, recommended, or approved by Weatherex;
 - the Products are not maintained, prepared or installed by authorised installation contractors in circumstances where Weatherex has directed the Purchaser to ensure that the Products are maintained, prepared or installed by such authorised installation contractors; or
 - the repair, rectification or replacement of the Products is required as a result of normal wear and tear or necessitated in whole or in part by the fault or negligence of any person other than Weatherex.
- Further to clause 6 and without limiting clause 6, Weatherex, under no circumstances will be liable for any claims, damages, or defects arising from or in any way attributable to:
 - acts of God, fire, flood or other severe weather conditions or unusual climatic conditions;
 - performance of paint/coatings applied to the Products;
 - development of any algae, bacteria or fungi on the Products (whether on the exposed or unexposed surfaces);
 - poor workmanship; or
 - any other losses or damages (whether direct or indirect) including property damage or personal injury, consequential loss, economic loss or loss of profits arising in contract or negligence.

Remedies

- Should the Purchaser's warranty claim made under clauses 1 and/or 2 be valid, then the remedy provided by Weatherex will be limited to either of the following as chosen by Weatherex:
 - Weatherex replacing the Products provided the claim is accepted by Weatherex and subject to such replacement Products being available in the manufacturing inventory at the time the claim is accepted by Weatherex. Otherwise, Weatherex will provide such replacement Products when they become available. The cost of replacing the Products being, at all material times, limited to the applicable sliding scale.
 - Weatherex repairing the Products provided the claim is accepted by Weatherex and subject to the cost of repairing the Products being, at all material times, limited to the applicable sliding scale.

| TABLE 1: SLIDING SCALE OF WARRANTY REPAIR COSTS NATURAL WOODSMAN BOARD | |
|---|--|
| Years of Service (commencing on the date of purchase) | Limit of Warranty Repair Costs covered subject to Claim being accepted |
| 0 to 4 Years | 100% of replacement/repairing costs covered by Weatherex |
| 4 to 7 Years | 50% of replacement/repairing costs covered by Weatherex |

| TABLE 2: SLIDING SCALE OF WARRANTY REPAIR COSTS PRE PRIMED EXTERIORBOARD, HIGH IMPACT BOARD & RUBIX PANEL | |
|--|--|
| Years of Service (commencing on the date of purchase) | Limit of Warranty Repair Costs covered subject to Claim being accepted |
| 0 to 6 Years | 100% of replacement/repairing costs covered by Weatherex |
| 7 to 10 Years | 50% of replacement/repairing costs covered by Weatherex |

| TABLE 3: SLIDING SCALE OF WARRANTY REPAIR COSTS PRE PRIMED BOARD | |
|---|--|
| Years of Service (commencing on the date of purchase) | Limit of Warranty Repair Costs covered subject to Claim being accepted |
| 0 to 7 Years | 100% of replacement/repairing costs covered by Weatherex |
| 8 to 15 Years | 50% of replacement/repairing costs covered by Weatherex |
| 16 to 25 Years | 25% of replacement/repairing costs covered by Weatherex |

- Should the Purchaser's warranty claim made under clause 3 be valid, then the remedy provided by Weatherex will be limited to Weatherex replacing the Accessory Products provided the claim is accepted by Weatherex and subject to such replacement Accessory Products being available in the manufacturing inventory at the time the claim is accepted by Weatherex. Otherwise, Weatherex will provide such replacement Accessory Products when they become available.
- The Purchaser is not entitled to any other remedies (that is apart from the remedies detailed in clauses 8 and 9) with respect to a warranty claim under clauses 1, 2 or 3..
- Any replacement works will be conducted in accordance with the Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements applicable at the time of construction. Where the Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements have changed after the Products were purchased, Weatherex will not be responsible for any costs associated with ensuring that the replacement works comply with the updated Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements.
- Where an approved claim requires re-coating of the Products the Purchaser acknowledges and agrees to accept minor colour variations between the existing or original colour and the re-coated replacement Products or rectification areas.
- Except as provided for in these terms and to the fullest extent permitted by law, all terms, statements, warranties and conditions whether express, implied, statutory or otherwise, relating to the Products, the Accessory Products, the subject matter of these terms or to these terms generally are excluded. Nothing contained herein excludes or modifies any rights the Purchaser may have under the Australian Competition and Consumer Act 2010 (Cth) (or equivalent in other countries as determined by Weatherex in its sole discretion).

Disclaimer

- Recommendations made by Weatherex are based on good building practice and are not a complete statement of all relevant data. As the installation of the Products is influenced by and relies on factors outside the control of Weatherex, Weatherex assumes no responsibility for works/systems used in connection with the installation of the Products and their suitability to satisfy relevant Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements.
- Unless specifically stated otherwise, the warranties under clauses 1, 2 and 3 apply only to Weatherex products purchased and installed according to the Weatherex Installation Guide in Australia, Asia, Pacific Region and New Zealand.

Australian Consumer Law

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Making Warranty Claims

- The claimant (being the Purchaser) must make all warranty claims in writing. The claimant must be the original purchaser of the Weatherex product and must retain the purchase receipt (in relation to the purchase of the product) as proof of purchase. Proof of purchase must be provided to Weatherex as part of the warranty claim. Warranty claims (and claims for reasonable costs and expenses in making the claim as referred to in clause 18) can be addressed to Weatherex by post, fax or via e-mail as follows: The Manager, Weatherex Pty Ltd, PO Box 21, Raymond Terrace NSW 2324 Phone 1800 040 080 Fax 1800 647 926 Email sales@weatherex.com.au
- Weatherex will respond to all warranty claims. This response may include an inspection by a Weatherex representative of the installed Product. The claimant will bear all costs and expenses will be reimbursed to the claimant in the event that the claim is accepted by Weatherex.



Shadowwood Smooth

weathertex

timber made perfect, naturally

weathertex.com.au Ph: 1800 040 080 Fax: 1800 647 926



* Refer to the Weathertex Manufacturer's Warranty Conditions

Weathertex is made in Australia by Weathertex Pty Ltd ABN 67 084 713 986, Masonite Road, Raymond Terrace, NSW 2324



The information in this manual related to Weathertex's product as developed and manufactured at the time of printing. Importantly, Weathertex follows a policy of continuous product testing and improvement. For this and other reasons Weathertex reserves the right to make any changes or modifications to this manual and any other relevant document as and when it considers necessary and without notice. Accordingly, users of Weathertex's products are encouraged to regularly contact Weathertex to obtain the current manual. This Installation Guide was printed July 2012.