



# QT EcoSeries Exterior Wall Panel


QT Systems

PO Box 6249 Acacia Ridge DC Q 4110 Australia

Ph: +61 7 3272 3424 Fx: +61 7 3272 3406



## Soffit Type 1 (AS-6.1.B)

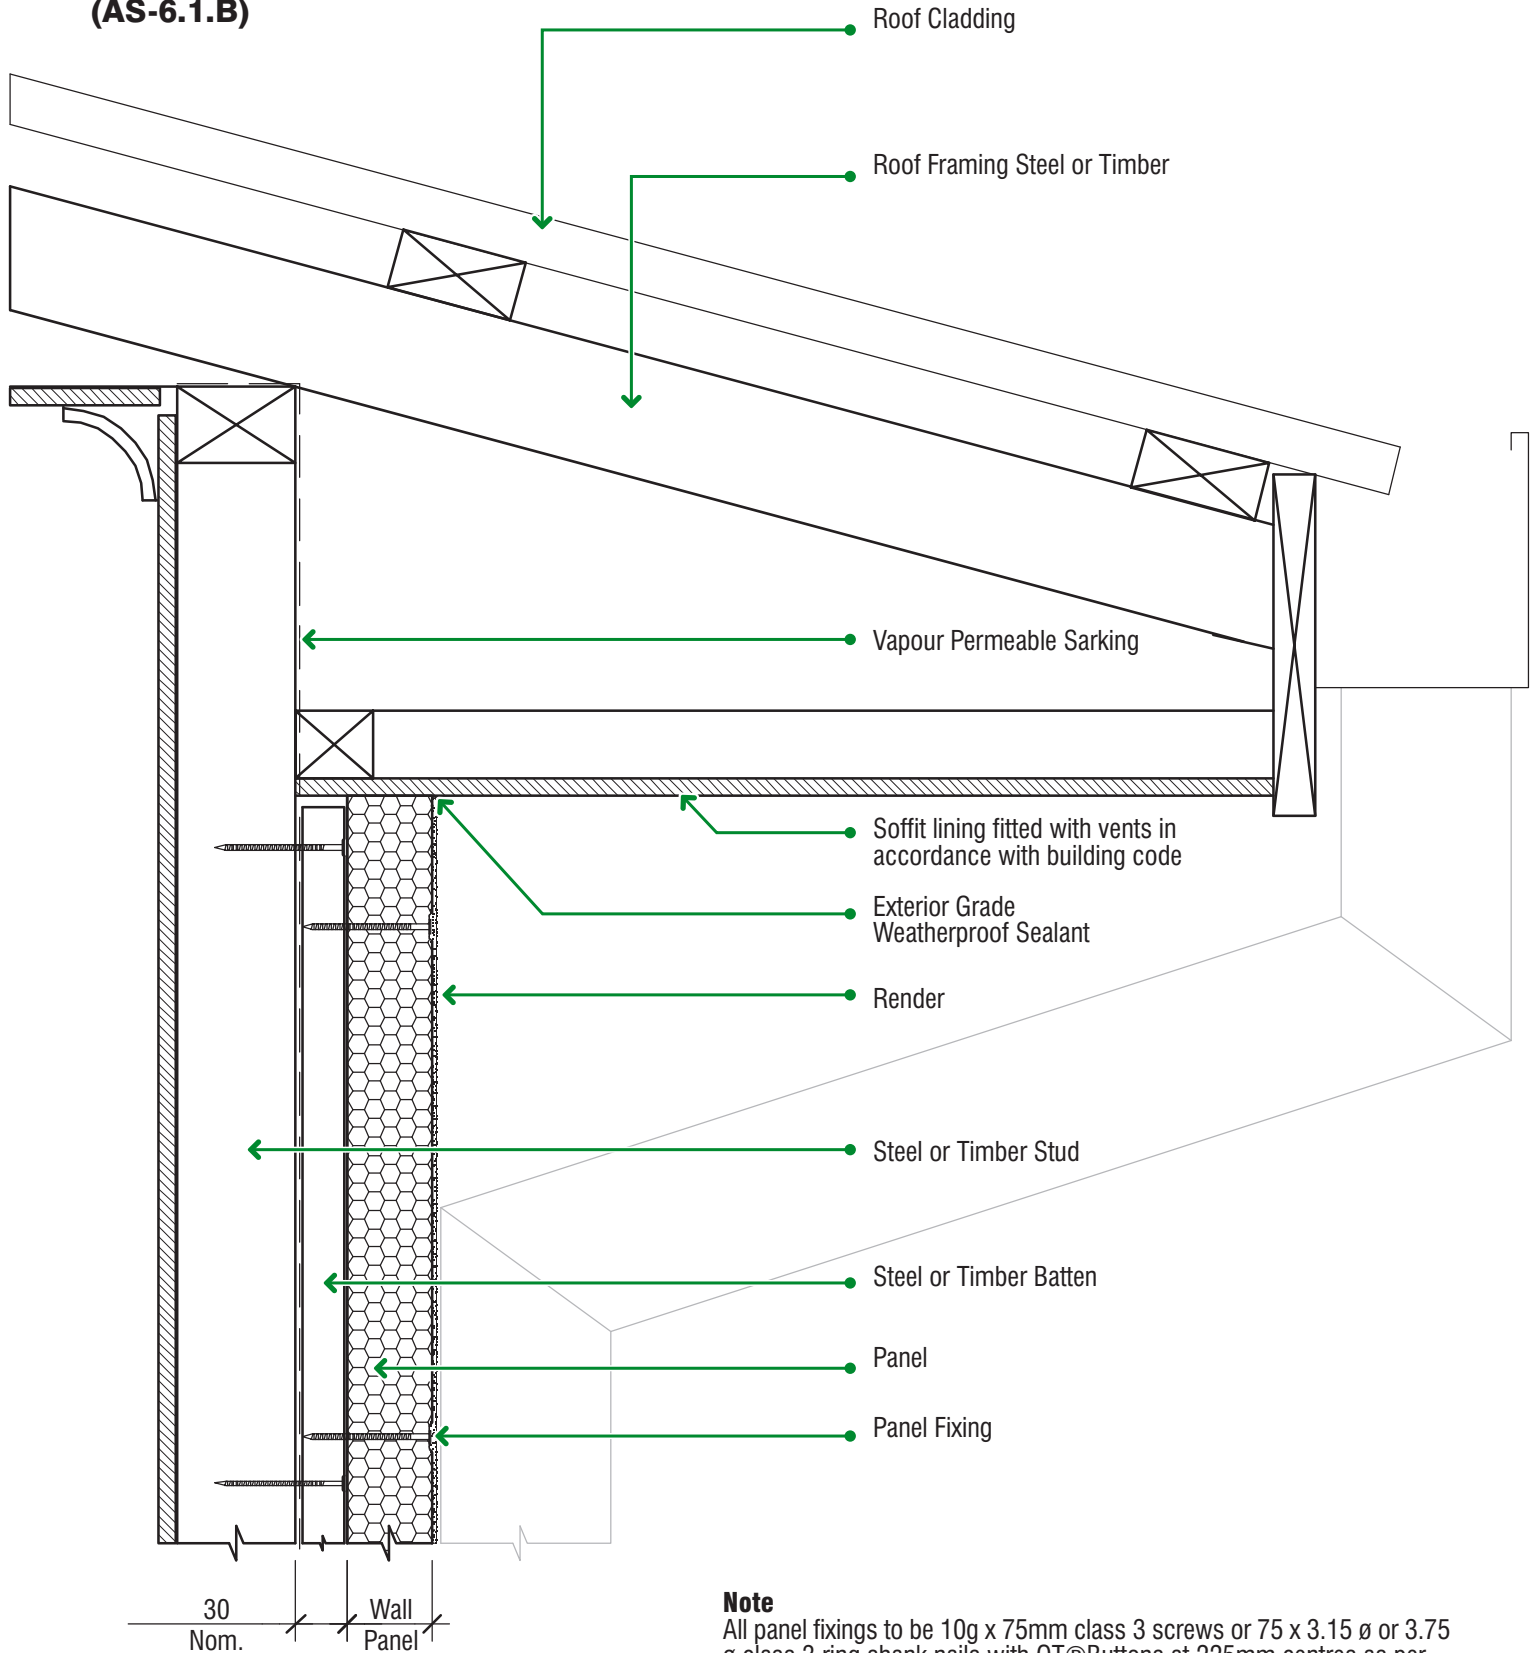

### Note

All panel fixings to be 10g x 75mm class 3 screws or 75 x 3.15  $\emptyset$  or 3.75  $\emptyset$  class 3 ring shank nails with QT®Buttons at 225mm centres as per technical manual section 2. Batten fixings should be class 3 and as section 2 of the technical manual.



# QT EcoSeries Exterior Wall Panel


QT Systems

PO Box 6249 Acacia Ridge DC Q 4110 Australia

Ph: +61 7 3272 3424 Fx: +61 7 3272 3406



## Soffit Type 2 (AS-6.2.B)

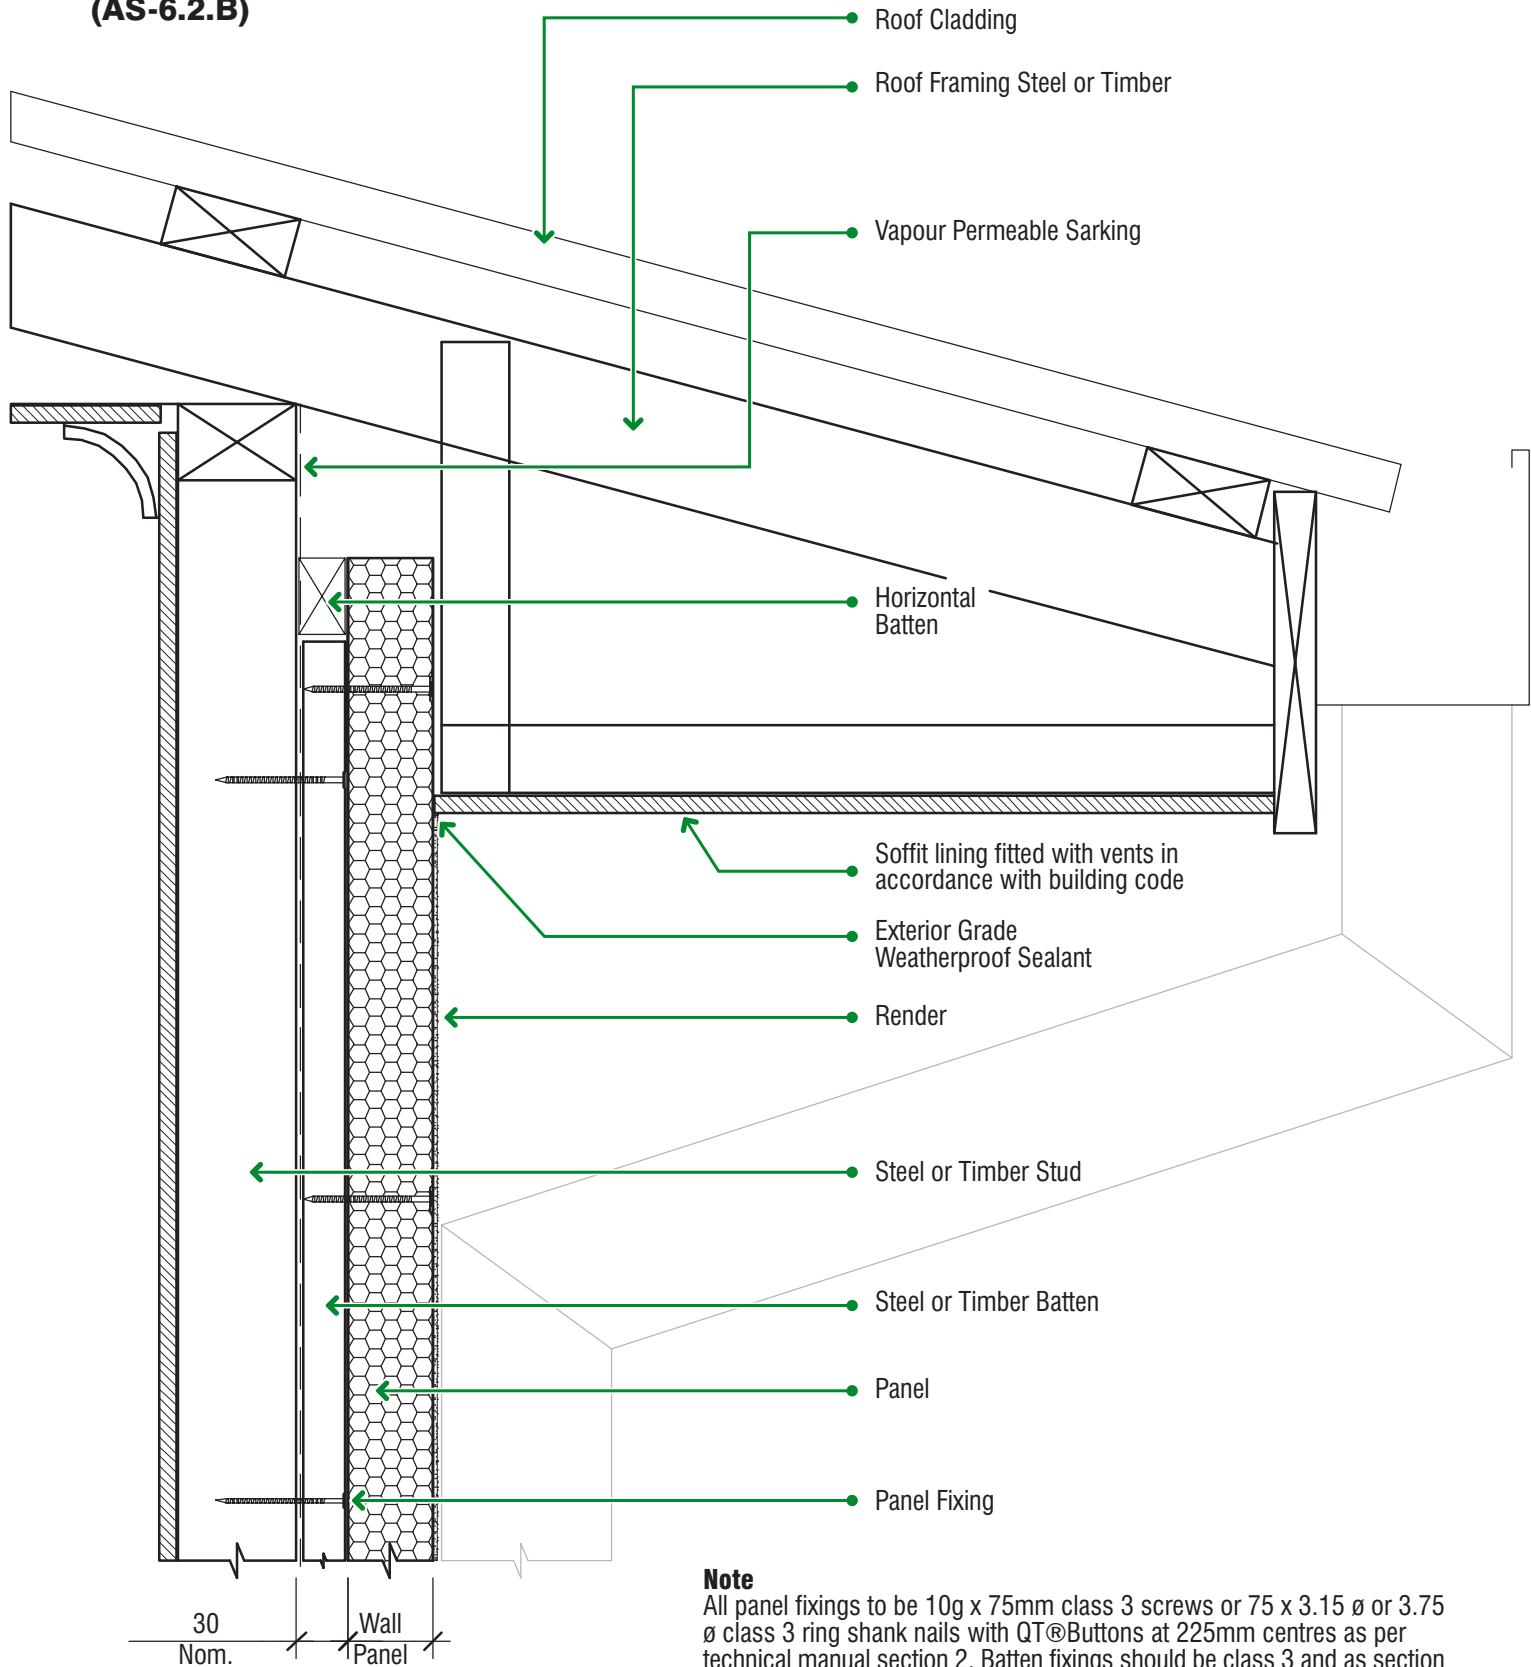

### Note

All panel fixings to be 10g x 75mm class 3 screws or 75 x 3.15  $\emptyset$  or 3.75  $\emptyset$  class 3 ring shank nails with QT@Buttons at 225mm centres as per technical manual section 2. Batten fixings should be class 3 and as section 2 of the technical manual.




# QT EcoSeries Exterior Wall Panel

QT Systems  
PO Box 6249 Acacia Ridge DC Q 4110 Australia  
Ph: +61 7 3272 3424 Fx: +61 7 3272 3406



## Flush Eaves (AS-6.3.B)

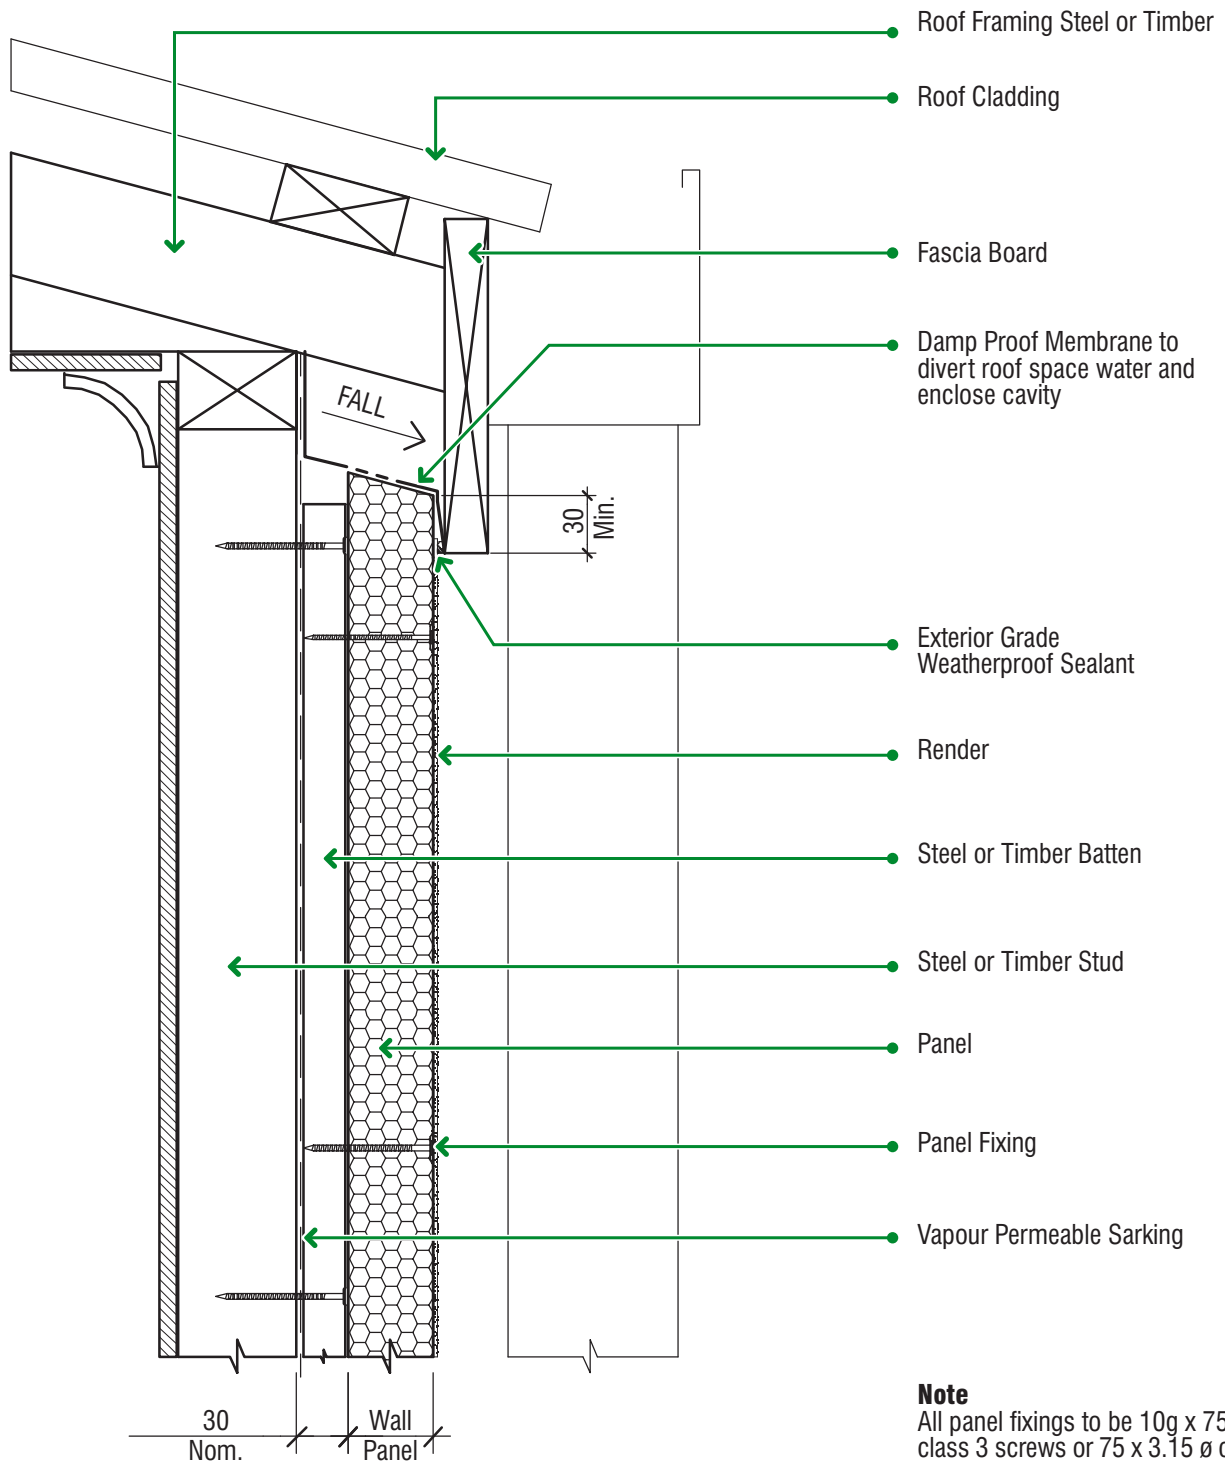

### Note

All panel fixings to be 10g x 75mm class 3 screws or 75 x 3.15  $\phi$  or 3.75  $\phi$  class 3 ring shank nails with QT®Buttons at 225mm centres as per technical manual section 2. Batten fixings should be class 3 and as section 2 of the technical manual.